
QMS[®] CrownNet[®]

Setup Guide

1800329-001H



Trademarks

The following are trademarks or registered trademarks of their respective owners. Other product names mentioned in this manual may also be trademarks or registered trademarks of their respective owners. Registered trademarks are registered in the United States Patent and Trademark Office; some trademarks may also be registered in other countries. QMS, Crown, CrownNet, the QMS logo, and the Crown seal are registered trademarks of QMS, Inc. Adobe, Acrobat, and Illustrator/Adobe Systems Incorporated. PostScript is a trademark of Adobe Systems Incorporated for a page description language and may be registered in certain jurisdictions. Apple, AppleTalk, EtherTalk, LaserWriter, LocalTalk, Macintosh, TrueType/Apple Computer, Inc. DEC, DECnet, VMS/Digital Equipment Corporation. FrameMaker/Frame Technology Corporation. Hewlett-Packard, HP, PCL, HP-GL, HP-UX, LaserJet/Hewlett-Packard Co. AIX, IBM PC, Token-Ring/International Business Machines Corporation. Helvetica/Linotype-Hell AG and/or its subsidiaries. Internet Explorer, Microsoft, MS-DOS/Microsoft Corporation. Netscape/Netscape, Inc. Novell, Novell YES, and NetWare/Novell, Inc. Transverter Pro/TechPool, Inc. UNIX/UNIX Systems Laboratories. Ethernet, Xerox/Xerox Corporation. ITC Zapf Dingbats/International Typeface Corporation. Solaris, SunOS/Sun.

Proprietary Statement

The software included with your CrownNet interface is Copyrighted © 1998 by QMS, Inc. All Rights Reserved. This software may not be reproduced, modified, displayed, transferred, or copied in any form or in any manner or on any media, in whole or in part, without the express written permission of QMS, Inc.

Copyright Notice

This manual is Copyrighted © 1998 by QMS, Inc., One Magnum Pass, Mobile, AL 36618. All Rights Reserved. This manual may not be copied in whole or in part, nor transferred to any other media or language, without the express written permission of QMS, Inc.

Contents

Introduction	5
Typographic Conventions	5
What's Included in CrownNet	6
Alternate Media	6
Manuals on the CD-ROM	7
QMS Product Registration	8
Setting up the CrownNet Interface—Overview	9
Network Connection	12
Ethernet Network Connection	12
Token-Ring Network Connection	15
Software Installation	17
Installing CrownAdmin 3 for AIX	17
Installing CrownAdmin for DOS	18
Installing CrownAdmin 3 for HP-UX	19

Installing CrownAdmin 3 for Macintosh	20
Installing CrownNet Manager for OS/2	21
Installing CrownAdmin 3 for OS/2	22
Installing CrownAdmin 3 for Solaris	23
Installing CrownAdmin 3 for SunOS	24
Installing CrownAdmin 3 for Windows/Windows 95/Windows NT/Windows for Workgroups	26
Installing the CrownNet Print Utility for Windows	27
Installing the UNIX Host Software	30
Interface Configuration	32
EtherTalk Interface Configuration	33
OS/2 LAN Manager/LAN Server and Microsoft Windows Network Interface Configuration	33
NetWare Interface Configuration (Netware 3.x)	33
NetWare Interface Configuration (Netware 4.x)	36
TCP/IP Interface Configuration	37
Network Configuration	39
CrownNet Print Utility for Windows Configuration	39
EtherTalk NetWork Configuration	46
NetWare 3.x Network Configuration (Using CrownAdmin 3)	46
NetWare 3.x Network Configuration (Using PCONSOLE)	49
NetWare 4.x Network Configuration (Using PCONSOLE)	51
NetWare 4.x Network Configuration (Using NWAdmin)	52
OS/2 LAN Manager/LAN Server Network Configuration	54
TCP/IP NetWork Configuration	57
Printer Web Page	59
Accessing the Web Page	60
Printer Home Page	64
Operator Control Page	64
General Settings Page	64
Printer Jobs Page	65
Consumable Status Page	66
Accounting Page	66
System Support Page	66
QMS, Inc. Page	67
Online Help Page	67
CrownNet Menus	68
Overall View of the CrownNet Menu	68
Common Menu	69
EtherTalk Menu	70
Lan Manager Menu	71

NetWare Menu	72
TCP/IP Menu	73
Where To Go From Here	74
If You Have Trouble... ..	75
Sources of Support	75
Your QMS Vendor	75
Your Application Vendor	75
Q-FAX	76
CompuServe	76
Internet	76
QMS Customer Response Center (CRC)	77
QMS World-wide Offices	78



Introduction

Your QMS CrownNet network interface includes the hardware, utilities software, and built-in network protocol software to enable you to connect your QMS printer to your network.

This document guides you through setting up the QMS CrownNet network interface. The *QMS CrownNet System Administrator's Guide* discusses the CrownNet interface configuration options and explains how to use the CrownNet software (CrownAdmin, CrownAdmin 3, CrownNet Manager, and CrownNet Print Utility for Windows).

Typographic Conventions

The following typographic conventions are used throughout this document:

Courier	Text you type; type it exactly as it appears
<i>Italic Courier</i>	Variable text you type; replace the italicized word(s) with information specific to your printer or computer
<i>lowercase italic</i>	Variable information in the text
↵	Press the Enter key (PC or workstation) or Return key (Macintosh)

» **Note:** Notes contain tips, extra information, or important information that deserves emphasis or reiteration.

▲ **Caution:** Cautions present information that you need to know to avoid equipment damage, process failure, or extreme annoyance.

What's Included in CrownNet

In addition to this manual, CrownNet consists of the items listed below. If your printer came standard with an Ethernet network interface, these items accompanied your printer. If you ordered an Ethernet or Token-Ring network interface card (NIC) separately, these items accompanied the NIC.

■ *QMS Software Utilities* CD-ROM

Includes this network interface software:

- CrownAdmin for DOS
- CrownAdmin 3 and on-line help for AIX, HP-UX, Macintosh, OS/2, Solaris, SunOS, and Windows/Windows 95/Windows NT/Windows for Workgroups
- CrownNet Manager for OS/2
- QMS Network Print Monitor for Windows NT
- QMS Network Print Monitor for Windows 95
- CrownNet Print Utility for Windows
- QMS UNIX Host Software

Includes this PDF documentation:

- *QMS CrownNet Setup Guide*
- *QMS CrownNet System Administrator's Guide*
- *QMS Network Print Monitor Administrator's Guide*
- *QMS Network Print Monitor for Windows 95 Administrator's Guide*
- *QMS Crown Remote Console User's Guide*

Alternate Media

QMS provides these software utilities and manuals on other media as well as on CD-ROM. Contact your QMS vendor for media availability and purchase information. You can also download them via our World

Wide Web Server at <http://www.qms.com>, our FTP server at <ftp.qms.com>, or CompuServe at <qmsprint>

Manuals on the CD-ROM

Your *CrownNet Systems Administrator Guide*, *CrownNet Setup Guide*, *Network Print Monitor Administrator's Guide*, and *Network Print Monitor for Windows 95 Administrator's Guide* are included on the CD-ROM in Adobe Acrobat PDF format. The Acrobat Reader program is also on the CD-ROM. The CD-ROM insert provides installation instructions.

When you use Acrobat to view your manuals, keep the following tips in mind for using some of the navigation features built into Acrobat and your manuals.

- You may view the document in three different styles: page only, with bookmarks, or with thumbnails. Try each to see which you like best. Viewing with bookmarks will enable you to use a quick table of contents to move around the document.
- The toolbar also gives you quick access to page navigation features. For example, you may click a button to advance (>) or reverse (<) one page, go to the start (|<) or end (>|) of the document, or use the history button (<<) to go to the previous pages you viewed. There are other buttons in the toolbar to change view or magnification of the document.
- As you browse through the document the open hand tool will sometimes turn into a pointing hand. You have discovered an embedded link in the manual. You will find these links in the table of contents, index, www addresses, and cross references. Click on the link to jump to a new location.
- Use the Acrobat Reader online help for a more complete explanation of these features.

Using the Acrobat Reader with your Manuals

Your manuals are stored in PDF format on the *QMS Software Utilities* CD-ROM. Use the Adobe Acrobat Reader, also included on the CD-ROM, to open them. PDF-formatted manuals give you more flexibility

QMS Product Registration

and convenience than do hardcopy manuals when you have to access needed information. Here's a list of some of the advantages of PDF formatted manuals:

- Ability to store the PDF manuals in a central location for access by anyone on the network
- Ability to view and print the manuals on any of the supported platforms (Windows, Macintosh, UNIX)
- Ability to view the manuals on-screen in different formats (side-by-side or two-up, one page at a time, scrolling two-up, article flow, and zooming capability up to 800%)
- Ability to conduct full text search built into Acrobat Reader 3.0
- Ability to print only the pages that you need
- Ability to view the manuals on web browsers using the Acrobat plug-in

In addition, your PDF-formatted manuals have been enhanced for on-screen viewing and navigation. Throughout each manual are numerous hotlinks to cross-reference points. The table of contents and the index are fully hotlinked to their respective page references.

We hope you enjoy using the Acrobat software to access the information in your QMS CrownNet user manuals. Your PDF-formatted manuals will never become dog-eared and yellowed or collect dust on some forgotten shelf. Your manuals will empower you to take full advantage of all the capabilities of your CrownNet interface

QMS Product Registration

To register over the World Wide Web, visit the QMS web page at <http://www.qms.com/support/prodreg>. To register by mail, fill out and send in your warranty card. To register by telephone, in the US call QMS toll-free at (334) 633-4300. In other countries, refer to "QMS World-wide Offices" on page 78 for the appropriate telephone number.

Setting up the CrownNet Interface—Overview

1 If necessary, install the CrownNet interface card.

This might not be necessary because some printers ship standard with an Ethernet network interface. Check the printer documentation if you're not sure.

For instructions on installing a CrownNet interface card, refer to the "Printer Options" chapter or the *Options* manual of your printer documentation.

2 Connect the printer to the network.

If you use...	Follow these instructions...
Ethernet	"Ethernet Network Connection" on page 12.
Token-Ring	"Token-Ring Network Connection" on page 15.

3 Install the appropriate CrownNet software.

If you use this operating system...	Install this software (on the CD-ROM)...	Following these instructions*...
AIX	CrownAdmin 3	"Installing CrownAdmin 3 for AIX" on page 17
	UNIX Host Software	"Installing the UNIX Host Software" on page 30
DOS	CrownAdmin	"Installing CrownAdmin for DOS" on page 18
HP-UX	CrownAdmin 3	"Installing CrownAdmin 3 for HP-UX" on page 19
	UNIX Host Software	"Installing the UNIX Host Software" on page 30
Macintosh	CrownAdmin 3	"Installing CrownAdmin 3 for Macintosh" on page 20

Setting up the CrownNet Interface Overview

If you use this operating system...	Install this software (on the CD-ROM)...	Following these instructions*...
OS/2	CrownNet Manager	"Installing CrownNet Manager for OS/2" on page 21
	CrownAdmin 3	"Installing CrownAdmin 3 for OS/2" on page 22
Sun/SPARC Solaris 2.4	CrownAdmin 3	"Installing CrownAdmin 3 for Solaris" on page 23
	UNIX Host Software	"Installing the UNIX Host Software" on page 30
Sun/SPARC SunOS 4.1.x	CrownAdmin 3	"Installing CrownAdmin 3 for SunOS" on page 24
	UNIX Host Software	"Installing the UNIX Host Software" on page 30
Windows 3.1, Windows 95, Windows for Workgroups 3.11, Windows NT 3.5, or Windows 4.0	Windows 32s (if you're using Windows or Windows for Workgroups and don't have Win 32s installed)	"Installing CrownAdmin 3 for Windows" on page 26
	CrownAdmin 3	
	CrownNet Print Utility for Windows	"Installing the CrownNet Print Utility for Windows" on page 27
	Network Print Monitor for Windows 95	"QMS Network Print Monitor for Windows 95 System Administrator's Guide"
	Network Print Monitor for NT	"QMS Network Print Monitor for Windows NT System Administrator's Guide"

*These instructions are also included in readme files in the appropriate directories on the CD-ROM.

4 Configure the CrownNet interface.

If you use...	Follow these instructions...
EtherTalk	"EtherTalk Interface Configuration" on page 33.
Microsoft Windows Network	"CrownNet Print Utility for Windows Configuration" on page 39.
NetWare	"NetWare Interface Configuration (Netware 3.x)" on page 34 or "NetWare Interface Configuration (Netware 4.x)" on page 37
OS/2 LAN Manager/LAN Server	"OS/2 LAN Manager/LAN Server and Microsoft Windows Network Interface Configuration" on page 33.
TCP/IP	"TCP/IP Interface Configuration" on page 38.

5 Configure the network.

If you use...	Follow these instructions...
EtherTalk	"CrownNet Print Utility for Windows Configuration" on page 39.
Microsoft Network Interface	"CrownNet Print Utility for Windows Configuration" on page 39
NetWare	"NetWare 3.x Network Configuration (Using CrownAdmin 3)" on page 46 or "NetWare 3.x Network Configuration (Using PCONSOLE)" on page 49. "NetWare 4.x Network Configuration (Using PCONSOLE)" on page 50 or "NetWare 4.x Network Configuration (Using NWAdmin)" on page 52
OS/2 LAN Manager/LAN Server	"OS/2 LAN Manager/LAN Server Network Configuration" on page 54
TCP/IP	"TCP/IP NetWork Configuration" on page 57.

Network Connection

 
The method you use to connect your printer to the network depends on whether you're connecting to an Ethernet network (described below) or a Token-Ring network (described on page 15).

Ethernet Network Connection


- For thin-wire Ethernet (10Base2, BNC connector) see the next section.
- For thick-wire Ethernet (10Base5, AUI connector)—not available for some printers—see page 13.
- For twisted-pair Ethernet (10BaseT/100BaseTX, RJ45 connector) see page 14.

Thin-Wire Ethernet Connection

Thin-wire Ethernet connections use BNC connectors.



BNC 50 Ohm
Terminator

 

BNC "T"
Connector


-
- ▲ **Caution:** *Unless the BNC "T" connector is already installed on the thin-wire Ethernet cable, your network's operation is disrupted during the connection process.*
-

- 1 Turn off the printer, and unplug the power cord.
- 2 If the BNC "T" connector is already installed, go to step 3. Otherwise, attach one section of thin-wire Ethernet cable to one end of the BNC "T" connector.

- 3 Attach another section of thin-wire Ethernet cable or a 50 ohm terminator to the other end of the BNC “T” connector.
- 4 Attach the BNC “T” connector to the BNC port on the CrownNet interface.
- 5 Plug in the printer, and turn it on.
- 6 Go to “Software Installation” on page 17.

Thick-Wire Ethernet Connection


Thick-wire Ethernet connections use AUI connectors.

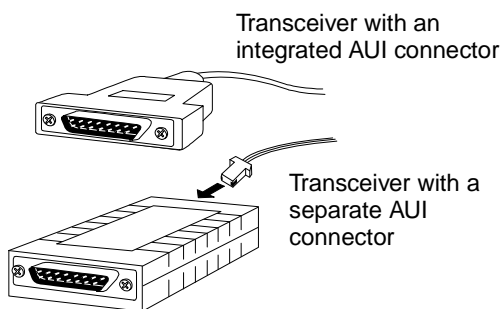

- 1 Turn off the printer, and unplug the power cord.
- 2 Plug the transceiver through the retainer into the AUI port on the CrownNet interface.
 - If you're using a transceiver with an integrated AUI cable, tighten the retainer screws.
 - If you're using a transceiver without an AUI cable, attach the AUI connector to the transceiver.
- 3 Plug in the printer, and turn it on.
- 4 Go to “Software Installation” on page 17.

Twisted-Pair Ethernet Connection

Twisted-pair Ethernet connections use RJ45 connectors.

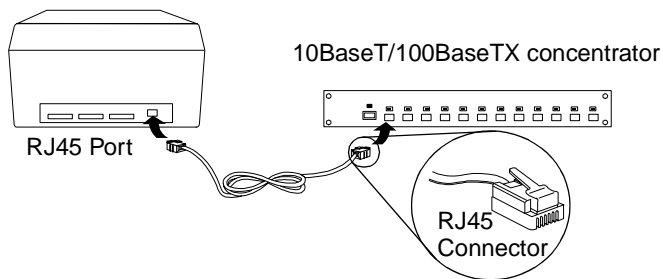


- 1 Turn off the printer, and unplug the power cord.**
- 2 Connect one end of the twisted-pair Ethernet cable to the RJ45 port on the CrownNet interface.**
- 3 Connect the other end of the cable to the 10BaseT/100BaseTX concentrator.**
- 4 Plug in the printer, and turn it on.**
- 5 Go to “Software Installation” on page 17.**

Token-Ring Network Connection


Token-Ring connections support both Type 1 (shielded twisted-pair—IBM Token-Ring Network Adapter cable or the equivalent) or Type 3 (unshielded twisted-pair) cables.

-
- ▲ **Caution:** *While Type 3 unshielded twisted-pair Token-Ring cables can be used on Ethernet networks, unshielded twisted-pair Ethernet cables may not be compatible with Token-Ring networks. Check the Electronic Industries Association (EIA) TIA 568B specification for more information.*
-

Type 1

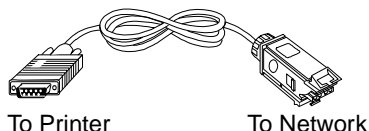

Type 3

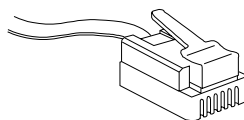

-
- ▲ **Caution:** *Before continuing with this procedure, make sure you know the network's ring speed. If the printer is set to the wrong network ring speed, network operation will be disrupted.*
-

- 1 Turn off the printer, and unplug the power cord.**
- 2 Connect the network adapter cable to the appropriate Token-Ring port on the CrownNet interface.**
- 3 Plug in the printer.**
- 4 Configure, if necessary, the interface.**

For 16 Megabit Networks (default setting)

- a Connect the printer to the network with the network adapter cable.
- b Turn on the printer.

For 4 Megabit Networks

- a Turn on the printer.

- b Once the printer is on line and the message window reads IDLE, press the Online/Offline key to take it off line.
- c Access the Administration/Communications/xxxxxxx NIC/CrownNet/Common/Ring Speed menu (where xxxxxxxx is either Resident or Optional).

» **Note:** *For complete information on using the control panel, see your printer documentation.*

- d Select 4 Mbits/Sec as the network speed.

▲ **Caution:** *Leave the printer disconnected from the network if you are changing the ring speed.*

- e Use the Administration/Communications/xxxxxxx NIC/CrownNet/Common/Soft Reset menu to reset the CrownNet interface (where xxxxxxxx is either Resident or Optional).
- f Connect the printer to the network with the network adapter cable.

5 The default source routing type (Auto—Send the file as the most appropriate frame type) is fine for most Token-Ring networks.

However, if your network uses a different type of source routing, identify that now in the Administration/Communications/xxxxxxx NIC/CrownNet/Common/Source Routing menu (where xxxxxxxx is either Resident or Optional). Other choices are

- **All**—Send as an all-routes-explorer frame, also known as an all-routes-broadcast frame.
- **Off**—Send without source routing information.
- **Single**—Send as a spanning-tree-explorer frame, also known as a single-route-broadcast frame.

6 Go to “Software Installation” on page 17.

Software Installation*

Installing CrownAdmin 3 for AIX

CrownAdmin 3 for AIX is a software utility that allows you to monitor and configure QMS printers and perform network operations on printers connected to your network..

1 Insert the CD-ROM in the CD-ROM drive.

» **Note:** *Some CD-ROM drives require that the disk be placed in a caddy before being inserted in the drive. Check your CD-ROM documentation for information.*

2 Logon the UNIX system as root.

3 Go to the root directory by typing

```
cd /\
```

4 If you don't already have a CD-ROM mountpoint, create a root-level directory by typing

```
mkdir /cdrom\
```

5 Mount the CD-ROM file system by typing

```
mount -o ro -v cdrfs device_filename /cdrom\
```

where *device_filename* is the complete pathname of the device file associated with the CD-ROM drive. If you're not sure of the pathname, check your AIX documentation.

6 Verify that the CD-ROM file system has been mounted by listing the contents of the directory:

```
ls /cdrom\
```

The directory contains several subdirectories, including unix.

*These instructions are also provided in readme files in the appropriate directories on the CD-ROM.

7 Change to the location where you want the CrownAdmin 3 directory to be created.

- » **Note:** *The directory in which the crnadm file resides must be able to be mounted by all network nodes that need to access the printer.*

8 Extract the files from the CD-ROM:

For example:

```
tar xvf /cdrom/plaform/unix/crnadm/aix/  
aix.tar
```

This creates a crnadm directory containing CrownAdmin 3.

- » **Note:** *See the main readme file on the CD-ROM for the exact location of this file.*

9 Unmount the CD-ROM file system:

```
umount device_filename
```

For *device_filename*, substitute the complete pathname of the device file associated with the CD-ROM drive.

10 Add the name of the directory containing crnadm (the directory in which you extracted the aix.tar file) to your path.

11 Install the UNIX Host Software, following the instructions in “Installing the UNIX Host Software” on page 30.

Installing CrownAdmin for DOS

CrownAdmin for DOS is a software utility that allows you to monitor and configure QMS printers and perform network operations on printers connected to your network..

1 Insert the CD-ROM in the CD-ROM drive.

2 At the DOS C> prompt, type the full path of the install program.

For example

```
x:\platform\dos\crnadm\install source destination
```

where *x* is the letter of the CD-ROM drive, *source* is the pathname of the drive/directory containing the installation software, and *destination* is the full pathname of the directory in which the software will be installed.

- » **Note:** See the main readme file on the CD-ROM for the exact location of this file.

3 Go to “Interface Configuration” on page 32.

Installing CrownAdmin 3 for HP-UX

CrownAdmin 3 for HP-UX is a software utility that allows you to monitor and configure QMS printers and perform network operations on printers connected to your network..

1 Insert the CD-ROM in the CD-ROM drive.

- » **Note:** Some CD-ROM drives require that the disk be placed in a caddy before being inserted in the drive. Check your CD-ROM documentation for information.

2 Log on the UNIX system as root.

3 Go to the root directory by typing

```
cd /\
```

4 If you don't already have a CD-ROM mountpoint, create a root-level directory by typing

```
mkdir /cdrom\
```

5 Mount the CD-ROM file system by typing

```
mount -t cdfs device_filename /cdrom\
```

where *device_filename* is the complete pathname of the device file associated with the CD-ROM drive. If you're not sure of this pathname, check your HP-UX documentation.

6 Verify that the CD-ROM file system has been mounted by listing the contents of the directory:

The directory contains several subdirectories, including *unix*.

7 Change to the location in which you want the CrownAdmin 3 directory to be created.

» **Note:** *The directory in which crnadm.exe resides must be able to be mounted by all network nodes that need to access the printer.*

8 Extract the appropriate files from the CD-ROM.

- For example, if you're running HP-UX version 9.x, type

```
tar xvf /cdrom/platform/unix/crnadm/hp_ux/  
hp9.tar↵
```

- For example, if you're running HP-UX version 10.x, type

```
tar xvf /cdrom/platform/unix/crnadm/hp_ux/  
hp10.tar↵
```

This creates a crnadm directory containing CrownAdmin 3.

» **Note:** *See the main readme file on the CD-ROM for the exact location of this file.*

9 Unmount the CD-ROM file system:

```
umount device_filename↵
```

For *device_filename*, substitute the complete pathname of the device file associated with the CD-ROM drive.

10 Add the name of the directory containing crnadm (the directory in which you extracted the hp9.tar or hp10.tar file) to your path.

11 Install the UNIX Host Software, following the instructions in “Installing the UNIX Host Software” on page 30.

Installing CrownAdmin 3 for Macintosh

CrownAdmin 3 for Macintosh is a software utility that allows you to monitor and configure QMS printers and perform network operations on printers connected to your network.

1 Insert the CD-ROM in your CD-ROM drive.

- 2 If necessary, double-click the CD-ROM icon to display the CD-ROM contents.
 - 3 Double-click the MAC folder icon to display the folder contents.
- » **Note:** See the main readme file on the CD-ROM for the exact location of this folder.
- 4 Double-click the CRNADM folder icon to display the folder contents.
 - 5 Double-click the install or setup file to install CrownAdmin 3.
 - 6 Go to “Interface Configuration” on page 32.

Installing CrownNet Manager for OS/2

- » **Note:** For information on bypassing the print server and printing directly to the printer, see the QMS CrownNet System Administrator's Guide.

OS/2 Print Server

- 1 At the OS/2 LAN Manager/LAN Server print server, log into the network as the system administrator.
- 2 Insert the CD-ROM in the CD-ROM drive.
- 3 Open an OS/2 window.
- 4 At the DOS prompt, enter the path and filename for CrownNet Manager installer and the destination.

For example:

```
x:\platform\os2\cnetmgr\lsminst x: y:↵
```

where x is the drive in which you inserted the CD-ROM, and y is the drive on which CrownNet Manager will be installed.

- » **Note:** If you've previously installed the CrownNet Manager, you can use

```
x:\platform\os2\cnetmgr\lsminst x: y: /u↵
```

to force installation of the upgraded software.

The installation program creates and installs the software in a directory named `y:\CROWN`. CrownNet Manager stores important events in a log file, also in this directory.

- » **Note:** *See the main readme file on the CD-ROM for the exact location of this file.*
- 5 **To start the CrownNet Manager for OS/2 automatically each time the print server is turned on, add the following commands, in this order, at the end of the STARTUP.CMD file (but before any @EXIT command):**

```
set crownman=c:\crown↵
start c:\crown\crownman.exe -m↵
```
- » **Note:** *The -m option minimizes the CrownNet Manager window to an icon after the program opens.*
- 6 **To start the CrownNet Manager now, open an OS/2 window and type the following commands:**

```
set crownman=c:\crown↵
start c:\crown\crownman.exe↵
```

The CrownNet Manager window appears.

- 7 **To install specific ports, choose Install from the CrownNet Manager window.**
- 8 **In the Installation of CrownNet Ports dialog box, select the appropriate printer port(s) and choose Install.**

The selected ports are displayed in the CrownNet Manager window.
- » **Note:** *Port names are either the default or those chosen in "Interface Configuration" on page 32.*

Installing CrownAdmin 3 for OS/2

CrownAdmin 3 for OS/2 is a software utility that allows you to monitor and configure QMS printers and perform network operations on printers connected to your network.

- 1 **Insert the CD-ROM in your CD-ROM drive.**
- 2 **From Program Manager's File menu choose Run.**
- 3 **In the Run dialog box, enter the path and filename for the install program.**

For example:

```
x:\platform\os2\crnadm\install
```

where x is the letter of your CD-ROM.

- » **Note:** See the main readme file on the CD-ROM for the exact location of this file.
- 4 **Follow the instructions on the screen. For additional information, choose the Help button.**
 - 5 **Go to "Installing the CrownNet Print Utility for Windows" on page 27.**

Installing CrownAdmin 3 for Solaris

CrownAdmin 3 for Solaris is a software utility that allows you to monitor and configure QMS printers and perform network operations on printers connected to your network.

- 1 **Insert the CD-ROM in your CD-ROM drive.**

» **Note:** Some drives require that the disk be placed in a caddy before being inserted in the drive. Check your CD-ROM drive documentation for information. Also, it takes a few seconds for the automounter to detect the CD.

- 2 **Log on the UNIX system as root.**
- 3 **Type the following command to go to the root directory:**

```
cd /
```

- 4 **Verify that the CD-ROM file system has been automounted by listing the contents of the directory:**

```
ls /cdrom
```

The directory contains the several subdirectories, including unix.

5 Change to the location in which you want the CrownAdmin 3 directory to be created.

- » **Note:** *The directory in which crnadm.exe resides must be able to be mounted by all network nodes that need to access the printer.*

6 Extract the files from the CD-ROM.

For example:

```
tar xvf /cdrom/platform/unix/crnadm/solaris/  
solaris.tar
```

This creates a crnadm directory containing CrownAdmin 3.

- » **Note:** *See the main readme file on the CD-ROM for the exact location of this file.*

7 Unmount the CD-ROM file system:

```
umount device_filename
```

For *device_filename*, substitute the complete pathname of the device file associated with the CD-ROM drive.

8 Add the name of the directory containing crnadm (the directory in which you extracted the solaris.tar file) to your path.

9 Install the UNIX Host Software, following the instructions in “Installing the UNIX Host Software” on page 30.

Installing CrownAdmin 3 for SunOS

CrownAdmin 3 for SunOS is a software utility that allows you to monitor and configure QMS printers and perform network operations on printers connected to your network.

1 Insert the CD-ROM in your CD-ROM drive.

- » **Note:** *Some drives require that the disk be placed in a caddy before being inserted in the drive. Check your CD-ROM drive documentation for information.*

2 Log on the UNIX system as root.

- 3 Type the following command to go to the root directory:**

```
cd /\
```

- 4 If you already have a directory on the system named cdrom, skip to step 5.**

If you don't have a directory on the system named cdrom, type the following command to make one:

```
mkdir /cdrom\
```

- 5 Mount the CD-ROM file system:**

```
mount -r -t hsfs device_filename /cdrom\
```

For *device_filename* substitute the complete pathname of the device associated with the CD-ROM drive. On SunOS systems, *device_filename* is usually */dev/sr0*. If it isn't, check your SunOS system documentation.

- 6 Verify that the CD-ROM file system has been mounted by listing the contents of the directory:**

```
ls /cdrom\
```

The directory contains several subdirectories, including *unix*.

- 7 Change to the location in which you want the CrownAdmin 3 directory to be created.**

» **Note:** *The directory in which crnadm.exe resides must be able to be mounted by all network nodes that need to access the printer.*

- 8 Extract the files from the CD-ROM.**

For example:

```
tar xvf /cdrom/platform/unix/crnadm/sunos/  
sunos.tar\
```

This creates a *crnadm* directory containing CrownAdmin 3.

» **Note:** *See the main readme file on the CD-ROM for the exact location of this file.*

- 9 Unmount the CD-ROM file system:**

```
umount device_filename\
```

Software Installation

For *device_filename*, substitute the complete pathname of the device file associated with the CD-ROM drive.

- 10 Add the name of the directory containing **crnadm** (the directory in which you extracted the **sunos.tar** file) to your path.
- 11 Install the UNIX Host Software, following the instructions in “Installing the UNIX Host Software” on page 30.

Installing CrownAdmin 3 for Windows

CrownAdmin 3 for Windows is a software utility that allows you to monitor and configure QMS printers and perform network operations on printers connected to your network.

System Requirements

You must have the following to run CrownAdmin 3 for Windows:

- Windows 3.1, Windows 95, Windows for Workgroups 3.11, or Windows NT 3.5/4.0 on an IBM or compatible PC
- At least a 386 with 8 MB or more RAM and 10 MB of free hard disk space
- A Winsock 1.1-compliant stack—if you require TCP/IP compatibility

Installation

- 1 Insert the CD-ROM in the CD-ROM drive.

» **Note:** *If you're using Windows 95 or Windows NT, the CD-ROM boots automatically.*

- 2 If you're using Windows NT or Windows 95, or if you already have Windows 32s installed, skip to step 3.

If you don't currently have Win32s installed, install it now.

▲ **Caution:** *You must do this **before** installing CrownAdmin 3.*

- a From the Start menu choose Run...

- b In the Run dialog box type
`x:\platform\windows\win32s\disk1\setup`↓
where x is the letter of the CD-ROM drive, and choose OK.
- c Follow the instructions on the screen. For more information on Windows 32s, refer to your Windows documentation.

3 Install the CrownAdmin 3 software.

Windows NT and Windows 95

- a In the CD-ROM's Welcome dialog box choose Install Printer Utilities and Drivers.
- b In the Installation dialog box choose Next>.
- c In the Installation Type dialog box select Network/Custom Installation, and then choose Next>.
- d In the Network/Custom Installation dialog box, select CrownAdmin, if necessary, and then choose Next>.

Windows 3.1 and Windows for Workgroups

- a In Program Manager, from the File menu choose Run...
- b In the Run dialog box, type
`x:\platform\windows\crnadm\install`↓
where x is the letter of your CD-ROM, and choose OK.

4 Follow the instructions on the screen.

For additional information, choose the Help button.

5 Go to "Installing the CrownNet Print Utility for Windows" on page 27.

Installing the CrownNet Print Utility for Windows

The QMS CrownNet Print Utility for Windows is compatible with all CrownNet-equipped printers running with LAN Manager/LAN Server enabled (Administration/Communications/xxxxxxx NIC/CrownNet/Lan Manager/Protocol menu (where xxxxxxxx is either Resident or Optional)).

Software Installation

This utility operates over the NetBIOS/NetBEUI protocol from the following Windows environments:

- Windows 3.1—with LAN Server/LAN Manager Workstation Service
 - Windows for Workgroups 3.11, Windows NT 3.5 and above, or Windows 95—with Microsoft Windows Network (Microsoft NetBEUI protocol)
- » **Note:** *The Print Manager must be activated in all Windows environments. In addition, the Microsoft NetBEUI protocol must be installed and operational prior to the installation of the QMS CrownNet Print Utility for Windows. Refer to your Windows documentation for installation and configuration instructions.*

The installation program creates a CrownNet Print Utility group with a CrownNet Print Utility icon.

- 1 **With Windows running, insert the QMS Software Utilities CD-ROM in your computer's CD-ROM drive.**
- 2 **Open the Run dialog box.**
 - **Windows 3.1, Windows for Workgroups, Windows NT 3.x**—In Program Manager, from the File menu choose Run...
 - **Windows 95, Windows NT 4.x**—From the Start menu choose Run...
- 3 **In the Run dialog box enter the path and filename for the install program.**

For example:

`x:\platform\windows\prnutil\prntutil`

(where **x** is the letter of the drive in which you inserted the CD-ROM), and choose OK.

- » **Note:** *See the main readme file on the CD-ROM for the exact location of this file.*

4 Follow the instructions on the screen. You will be asked for the following information:

- Destination drive and subdirectory for the program files (the default is C:\CROWNPUW).
- Destination drive and subdirectory for the spool directory (the default is C:\~).

The spool directory is the directory in which Windows print files are stored prior to redirection to the CrownNet Print Utility interface. Ensure that the hard disk containing the spool directory has ample space available to hold spool files. At least 10 MB free space is recommended.

5 When the installation is complete, you are prompted to exit from the installation program and return to Program Manager. Choose OK.

6 Since the CrownNet Print Utility must be running when you print to a CrownNet port, we strongly recommend that you place the CrownNet Print Utility (CROWNPUW.EXE) into your Startup folder.

7 Go to “Interface Configuration” on page 32.

- » **Note:** *For installation instructions for the QMS Network Print Monitor, see the Administrator's Guide. The QMS Network Print Monitor for Windows 95 Administrator's Guide and the QMS Print Monitor Administrators Guide for Windows NT are included on the QMS Software Utilities CD-ROM.*

Installing the UNIX Host Software

1 Insert the CD-ROM in your CD-ROM drive.

- » **Note:** *Some drives require that the disk be placed in a caddy before being inserted in the drive. Check your CD-ROM drive documentation for information. Also, it takes a few seconds for the automounter to detect the CD.*

2 Log on the UNIX system as root.

3 Type the following command to go to the root directory:

```
cd /\
```

4 If you're using a Solaris system, skip to step 6.

If you're using a SunOS system and already have a directory on the system named `cdrom`, skip to step 5.

If you're using a SunOS system and don't have a directory on the system named `cdrom`, type the following command to make one:

```
mkdir /cdrom\
```

5 Mount the CD-ROM file system:

```
mount -r -t hsfs device_filename /cdrom\
```

For `device_filename` substitute the complete pathname of the device associated with the CD-ROM drive. On SunOS systems, `device_filename` is usually `/dev/sr0`. If it isn't, check your SunOS system documentation.

6 Verify that the CD-ROM file system has been mounted by listing the contents of the directory:

The directory contains several subdirectories, including `unix`.

7 Change to the directory in which you want the UNIX Host Software to be installed.

8 Extract the files from the CD-ROM.

For example:

```
tar xvf /cdrom/platform/unix/host_sw/hs_tar\
```


The utilities are installed in a directory named QMSOft in the current directory.

- » **Note:** See the main readme file on the CD-ROM for the exact location of this file.

9 Unmount the CD-ROM file system:

```
umount device_filename↵
```

For *device_filename*, substitute the complete pathname of the device file associated with the CD-ROM drive.

10 Change to the newly created QMSOft directory:

```
cd QMSOft↵
```

11 Run the Qinstall installation utility:

```
./Qinstall↵
```

12 Follow the instructions on the screen. When the installation is complete, the following message displays:

```
QMS UNIX Host Software installation complete
```

13 Copy the addprt and qpr utilities and their associated manual pages to standard directories. For example,

```
cp addprt /usr/bin↵
```

```
cp qpr /usr/bin↵
```

```
cp man/addprt.1 /usr/man/man1↵
```

```
cp man/qpr.1 /usr/man/man1↵
```

- » **Note:** If you're using SNMP to manage your network using SunNet Manager, copy the appropriate files to the SunNet Manager-agents directory.

See your SunNet Manager documentation for more information.

14 Update the printer's Internet name and address in the /etc/hosts file.

15 Run the QMS addprt utility by typing

```
addprt↵
```

16 Follow the instructions on the screen.

See chapter 7, “UNIX Utilities” in the *QMS CrownNet System Administrator's Guide* for more information.

17 Go to “Interface Configuration” on page 32.

Interface Configuration

This section briefly describes the configuration procedure for the printer interface. For an overview of menus and options see “CrownNet Menus” on page 68. For a complete discussion of all of the configuration options available through the Administration/Communications/xxxxxxx NIC/CrownNet menu (where xxxxxxxx is either Resident or Optional), see chapter 2, “Interface Configuration,” of the *QMS CrownNet System Administrator's Guide*.

You can make these configuration changes through any of the following means:

- **Printer Control Panel**—For information on using the printer control panel to change configuration menu settings, refer to your printer documentation.
- **CrownAdmin (for DOS), CrownAdmin 3 (for AIX, HP-UX, Macintosh, OS/2, Solaris/SunOS, and Windows/Windows NT/Windows for Workgroups), or CrownNet Manager (for OS/2)**—For more information on using this software, refer to the appropriate chapter in the system administrator's guide or to the software's on-line help.
- **Remote Console**—For information on accessing Remote Console, refer to the appropriate chapter in the system administrator's guide. For information on using Remote Console, refer to the *QMS Crown Remote Console User's Guide*.

EtherTalk Interface Configuration

- 1 If your network has more than one zone, use the Administration/Communications/xxxxxxx NIC/CrownNet/EtherTalk/Zone Name/Zone Part 1 and Zone Part 2 menus, (where xxxxxxxx is either Resident or Optional) to enter the name of the zone to which the printer is attached.
 - » **Note:** The two Zone Part x menus allow you to identify 1 zone with a name up to 32 characters long. (Up to 16 characters can be entered in each of the two menus). You cannot use these two menus to identify two zones. Trailing spaces are not considered part of the zone name. All standard printable ASCII characters are valid except the @ and ' symbols. The names are case sensitive.
- 2 Skip to “Network Configuration” on page 39.

OS/2 LAN Manager/LAN Server and Microsoft Windows Network Interface Configuration

- 1 One unique printer name is broadcast to the network. Use the Administration/Communications/xxxxxxx NIC/CrownNet/LAN Manager/Printer Name menu (where xxxxxxxx is either Resident or Optional) to enter the name of the printer.
 - » **Note:** The name can be up to 16 characters long. Spaces and lowercase characters are not allowed. Underscore characters (_) are allowed to simulate multiword names (for example, PRODUCT_MKTG).
- 2 If you're using OS/2 LAN Manager/LAN Server, skip to “OS/2 LAN Manager/LAN Server Network Configuration” on page 54.

If you're using Microsoft Windows Network, skip to “CrownNet Print Utility for Windows Configuration” on page 39.

NetWare Interface Configuration (Netware 3.x)

Unless you want to use the default settings, use the following procedure to name the file and print servers. These names must be unique.

- » **Note:** *In CrownAdmin 3, the printer shows up as QMS_xxxx_Print_System_hardwareaddress, where xxxx is the printer model number and hardwareaddress is the printer's hardware address as found on the printer start-up page. This address will be blank until the interface has been reset following installation.*

- 1 **In the Administration/Communications/xxxxxxxxx NIC/Crown-Net/NetWare/Config PServer/File Srv Name[1], File Srv Name[2], and File Srv Name[3] menus, (where xxxxxxxx is either Resident or Optional) enter the name of the target file server (primary 3.x configuration server).**

- » **Note:** *The three File Srv Name[x] menus allow you to identify 1 file server with a name up to 47 characters long. (Up to 16 characters can be entered in the first two menus and 15 in the third menu). You cannot use these 3 menus to identify 3 file servers. Up to 16 file servers are supported. To enter the 15 other file server names, use CrownAdmin 3.*

Spaces and lowercase characters are not allowed within file server names. However, underscore characters () are allowed to simulate multiword names (for example, PUBS_SERVER). At the printer control panel only, a space must be used following the last character of the file server name to end the name. For example, the file server name

FIRSTGROUP_GROUPS_BLUE_TEAM_TEAMS_CRC_QMS

is 42 characters long, and must be entered as follows:

```
FILE SRV NAME[1]
FIRST_GROUP_GROU

File Srv Name[2]
PS_BLUE_TEAM_TEA

File Srv Name[3]
MS_CRC_QMS<space>
```

where <space> is the space character.

- 2 In the Administration/Communications/xxxxxxx NIC/Crown-Net/NetWare/Config PServer/PServer Name[1], PServer Name[2], and PServer Name[3] menus (where xxxxxxxx is either Resident or Optional), enter the name of the bindery print server.**

» **Note:** *The three PServer Name[x] menus allow you to identify one print server with a name up to 47 characters long. (Up to 16 characters can be entered in the first two menus and 15 in the third menu). You cannot use these 3 menus to identify 3 print servers.*

Spaces and lowercase characters are not allowed in print server names. However, underscore characters (_) are allowed to simulate multiword names (for example, PUBS_PSERVER). At the printer control panel only, a space must be used following the last character of the print server name to end the name. For example, the print server name

FIRSTGROUP_GROUPS_GRAY_TEAM_TEAMS_CRC_QMS

is 42 characters long, and must be entered as follows:

```
PSERVER Name[ 1 ]  
FIRST_GROUP_GROU  
PSERVER Name[ 2 ]  
PS_GRAY_TEAM_TEA  
PSERVER Name[ 3 ]  
MS_CRC_QMS<space>
```

where <space> is the space character.

If you want the server to operate in an Rprinter mode, go to step 3. Otherwise, go to step 5

- 3 In the Administration/Communications/xxxxxxx NIC / CrownNet/NetWare/RN Printer#1/Printer Slot # menu (where xxxxxxxx is either Resident or Optional), enter the printer slot number.**

» **Note:** *This number must match the slot number chosen in the Printer Configuration submenu of the Print Server Configuration menu in the NetWare PCONSOLE utility.*

Interface Configuration

- 4 In the Administration/Communications/xxxxxxx NIC/Crown-Net/NetWare/RN Printer#1/PServer Name[1], PServer Name[2], and PServer Name[3] menus (where xxxxxxxx is either Resident or Optional), enter the name of the print server.

» **Note:** *The three PServer Name[x] menus allow you to identify 1 print server with a name up to 47 characters long. (Up to 16 characters can be entered in the first two menus and 15 in the third menu). You cannot use these 3 menus to identify 3 print servers.*

Spaces and lowercase characters are not allowed. However, underscore characters (_) are allowed to simulate multiword names (for example, PUBS_PSERVER). At the printer control panel only, a space must be used following the last character of the print server name to end the name. For example, the print server name

FIRSTGROUP_GROUPS_RED_TEAM_TEAMS_CRC_QMS

is 42 characters long, and must be entered as follows:

```
PSERVERName [ 1 ]  
FIRST_GROUP GROU  
PSERVER Name [ 2 ]  
PS_RED_TEAM TEAM  
PSERVER Name [ 3 ]  
S_CRC_QMS<space>
```

where <space> is the space character.

- 5 Reset the CrownNet interface by using the Administration/Communications/xxxxxxx NIC/CrownNet/Common/Soft Reset menu (where xxxxxxxx is either Resident or Optional).
- 6 Skip to “Network Configuration” on page 39.

NetWare Interface Configuration (Netware 4.x)

Unless you want to use the default settings, use the following procedure to name the file and print servers. These names must be unique.

- » **Note:** *In CrownAdmin 3, the printer shows up as QMS-xxxx-Print-System-hardwareaddress, where xxxx is the printer model number and hardwareaddress is the printer's hardware address as found on the printer start-up page.*
- 1 In the Administration/Communications/xxxxxxxx NIC/Crown-Net/NetWare/Config PServer/PServer Context[1], PServer Context[2], and PServer Context[3] menus (where xxxxxxxx is either Resident or Optional), enter the name of the configuration file server and print server context.**
- » **Note:** *The three PServer Context[x] menus allow you to identify the name of the NDS configuration file server and the print server context.*

The format for the option is

- File server name
- Space
- Print server context

For example, if the configuration file server name is QMS-4 and the print server context is PRINTSERV2.SALES.QMS, you would enter:

QMS-4 PRINTSERV2.SALES.QMS

- » **Note:** *Make sure to put a space between the file server name (QMS-4) and the print server context (PRINTSERV2.SALES.QMS).*
- Up to 16 characters can be entered in the Pserver Context[1] field, and additional 16 characters in Pserver Context[2] field, and 15 characters in the Pserver Context[3] field.
- » **Note:** *If you need to assign more than 14 characters to the file server name you must use CrownAdmin 3 to enter the name.*

Interface Configuration

- 2 **Reset the CrownNet interface by using the Administration/Communications/xxxxxxx NIC/CrownNet/Common/Soft Reset menu (where xxxxxxxx is either Resident or Optional).**
- 3 **Skip to “Network Configuration” on page 39.**

TCP/IP Interface Configuration

- 1 **If necessary, in the Administration/Communications/xxxxxxx NIC/CrownNet/TCPIP/Internet Address menu (where xxxxxxxx is either Resident or Optional), enter the printer’s Internet address.**

The factory default Internet address is 161.033.128.024.

- 2 **If necessary, in the Administration/Communications/xxxxxxx NIC/CrownNet/TCPIP/Default Router menu (where xxxxxxxx is either Resident or Optional), enter the Internet address of the default router.**

The factory default router address is 000.000.000.000.

- 3 **If necessary, in the Administration/Communications/xxxxxxx NIC/CrownNet/TCPIP/Subnet Mask menu (where xxxxxxxx is either Resident or Optional), enter the printer’s subnet mask.**

The default subnet mask is 000.000.000.000. This setting provides automatic sensing of gateways. If you identify a subnet mask, automatic sensing is disabled.

- 4 **Go to “Network Configuration” on page 39.**

Network Configuration

CrownNet Print Utility for Windows Configuration

Follow the appropriate procedure below to install a QMS CrownNet printer port as a Windows port and to connect it to a printer driver. The procedure you use depends on the version of Windows you're running.

- » **Note:** *You must have the QMS CrownNet Print Utility software installed before completing these procedures.*

Windows 3.1 and Windows for Workgroups 3.11

- » **Note:** *Windows 3.1 requires OS/2 LAN Server/LAN Manager Workstation Service. Windows for Workgroups 3.11 requires Microsoft Windows Network (Microsoft NetBEUI protocol). Refer to your Windows documentation for installation instructions.*
- 1 Double-click the CrownNet Print Utility icon to start the utility.**
- 2 In the Port menu, choose Add.**
- 3 In the CrownNet Port list, select the CrownNet port you want to install.**

The ports appear as an alphanumeric list of printers attached to the network. The names of these printers are defined in the Administration/Communications/xxxxxxx NIC/CrownNet/Lan Manager/Printer Name menu (where xxxxxxxx is either Resident or Optional), and are listed on the CrownNet configuration page (Administration/Communications/xxxxxxx NIC/CrownNet/Common/Config Page menu (where xxxxxxxx is either Resident or Optional)). The factory default name for each printer is QMS_080086xxxxxx, where xxxxxx is a unique number assigned by QMS. (Refer to the "Configuring the OS/2 LAN Manager/LAN Server or Microsoft Windows Network Protocol" section of chapter 2, "Printer Configuration," for instructions on changing the

printer name so you can identify the printers on the network more easily.)

If the printer you want is not in the port list, make sure it's attached to the network and on line, and that the CrownNet LAN Manager/LAN Server protocol is enabled (Administration/Communications/xxxxxxx NIC/CrownNet/Lan Manager/Protocol menu (where xxxxxxxx is either Resident or Optional)).

You may need to refresh the list by choosing the Cancel button and then from the Port menu by choosing Add again.

- 4 Accept or change the suggested Windows port name, and type any comments in the Description field. Make a note of the Windows port name (you'll need it later), and then choose OK to install the Windows port.**

The Windows port name must adhere to standard DOS file naming conventions. However, use of the file extension is optional. Be sure to make this name as descriptive as possible. You may want to include the type of printer and its location or owner as part of the name (for example, mktg1660 or dan_4525.mkt).

If you get a `Bad port name` error after you choose OK, make sure that you are using standard DOS file naming conventions.

- 5 In the CrownNet Print Utility, select the Windows port you just installed.**

If the printer Status shows `No Response`, you can either wait up to 15 seconds for the status to change or, after about 15 seconds, choose the Refresh command to display a message such as `OK`, `Busy`, `Offline`, `Occupied`, or `Out of Paper`. If the `No Response` message persists, or if an `Internal Error` message displays, either refer to the CrownNet Print Utility on-line help for advice on further action or close the utility and restart it.

- 6 In the Port menu, choose Connect to bring up the Windows Printers dialog box.**

- 7 Select a printer driver from the list of Installed Printers (or choose Add>> to install a new driver), and then choose Connect...**
- 8 In the Connect dialog box select the Windows port you installed in steps 2-4, and choose OK.**

The Windows port name will be at the bottom of the Ports list and will be in this format: *drive:\directory\port*, where *drive* is the spooling drive, *directory* is the spooling directory, and *port* is the CrownNet Windows port name.

- 9 Choose OK to close the Connect dialog box, and then choose Close to close the Printers dialog box.**

The setup is now complete, and you can immediately print through your CrownNet port. Refer to the *QMS CrownNet System Administrator's Guide* for additional information on setting up serverless and client-server (server-based) printing.

- » **Note:** *The QMS CrownNet Print Utility must be running when you print to your CrownNet port. We strongly recommend that, if you haven't already, you place the CrownNet Print Utility (CROWNPUW.EXE) into your Startup folder.*

Windows NT

- » **Note:** *Windows NT requires preinstallation of the Microsoft Windows Network running the NetBEUI Protocol, NetBIOS Interface, and Workstation and/or Server network software. Refer to your Windows documentation for installation instructions.*

- 1 Double-click the CrownNet Print Utility icon to start the utility.**
- 2 In the Port menu, choose Add.**
- 3 In the CrownNet Port list, select the CrownNet port you want to install.**

The ports appear as an alphanumeric list of printers attached to the network. The names of these printers are defined in the Administration/Communications/xxxxxxx NIC/CrownNet/Lan Manager/Printer Name menu (where xxxxxxxx is either Resident

or Optional) and are listed on the CrownNet configuration page (Administration/Communications/xxxxxxx NIC/CrownNet/Common/Config Page menu (where xxxxxxx is either Resident or Optional)). The factory default name for each printer is QMS_080086xxxxxx, where xxxxxx is a unique number assigned by QMS. (Refer to the “Configuring the OS/2 LAN Manager/LAN Server or Microsoft Windows Network Protocol” section of chapter 2, “Printer Configuration,” for instructions on changing the **printer name** so you can identify the printers on the network more easily.)

If the printer you want is not in the port list, make sure it's attached to the network and on line, and that the CrownNet LAN Manager/LAN Server protocol is enabled (Administration/Communications/xxxxxxx NIC/CrownNet/Lan Manager/Protocol menu (where xxxxxxx is either Resident or Optional)).

You may need to refresh the list by choosing the Cancel button and then from the Port menu by choosing Add again.

- 4 Accept or change the suggested Windows port name, and type any comments in the Description field. Make a note of the Windows port name (you'll need it later), and then choose OK to install the Windows port.**

The Windows port name must adhere to standard DOS file naming conventions. However, use of the file extension is optional. Be sure to make this name as descriptive as possible. You may want to include the type of printer and its location or owner as part of the name (for example, mktg1660 or dan_4525.mkt).

If you get a Bad port name error after you choose OK, make sure that you are using standard DOS file naming conventions.

- 5 Repeat steps 2-4 for each of the printers you want to set up to use the CrownNet Print Utility.**
- 6 In the CrownNet Print Utility, select the Windows port you installed in steps 2-4.**

If the printer Status shows No Response, you can either wait up to 15 seconds for the status to change or, after about 15 seconds,

choose the Refresh command to display a message such as OK, Busy, Offline, Occupied, or Out of Paper. If the No Response message persists, or if an Internal Error message displays, either refer to the CrownNet Print Utility on-line help for advice on further action or close the utility and restart it.

- 7 In the Port menu, choose Connect to bring up Print Manager.**
- 8 In the Printer menu, choose Create Printer.**
- 9 Type a name in the Printer Name field, select a suitable printer driver from the Driver list, then select the Windows port name you installed in steps 2-4, and choose OK.**

The Windows port name will be near the bottom of the Ports list and will be in this format: *drive:\directory\port*, where *drive* is the spooling drive, *directory* is the spooling directory, and *port* is the CrownNet Windows port name.

- 10 If you installed more than one Windows port, repeat steps 6-10 for each Windows port you installed.**
- 11 Close the Print Manager.**

The setup is now complete, and you can immediately print through your CrownNet port. Refer to the *QMS CrownNet System Administrator's Guide* for additional information on setting up serverless and client-server (server-based) printing.

- » **Note:** *The QMS CrownNet Print Utility for Windows must be running when you print to your CrownNet port. We strongly recommend that, if you haven't already, you place the CrownNet Print Utility for Windows (CROWNPUW.EXE) into your Startup folder.*

Windows 95

- » **Note:** *Windows 95 requires preinstallation of the Microsoft Windows Network running the NetBEUI Protocol, NetBIOS Interface, and Workstation and/or Server network software. Refer to your Windows documentation for installation instructions.*

- 1 Open the CrownNet Print Utility.**
- 2 In the Port menu, choose Add.**

3 In the CrownNet Port list, select the CrownNet port you want to install.

The ports appear as an alphanumeric list of printers attached to the network. The names of these printers are defined in the Administration/Communications/xxxxxxx NIC/CrownNet/Lan Manager/Printer Name menu (where xxxxxxxx is either Resident or Optional) and are listed on the CrownNet configuration page (Administration/Communications/xxxxxxx NIC/CrownNet/Common/Config Page menu (where xxxxxxxx is either Resident or Optional)). The factory default name for each printer is QMS_080086xxxxxx, where xxxxxx is a unique number assigned by QMS. (Refer to the “Configuring the OS/2 LAN Manager/LAN Server or Microsoft Windows Network Protocol” section of chapter 2, “Printer Configuration,” of the *QMS CrownNet System Administrator’s Guide* for instructions on changing the **printer name** so you can identify the printers on the network more easily.)

If the printer you want is not in the port list, make sure it’s attached to the network and on line, and that the CrownNet LAN Manager/LAN Server protocol is enabled (Administration/Communications/xxxxxxx NIC/CrownNet/Lan Manager/Protocol menu (where xxxxxxxx is either Resident or Optional)).

You may need to refresh by list by choosing the Cancel button and then from the Port menu choosing Add again.

4 Accept or change the suggested Windows port name, and type any comments in the Description field. Make a note of the Windows port name (you’ll need it later), and then choose OK to install the Windows port.

The Windows port name must adhere to standard DOS file naming conventions. However, use of the file extension is optional. Be sure to make this name as descriptive as possible. You may want to include the type of printer and its location or owner as part of the name (for example, mktg1660 or dan_4525.mkt).

If you get a Bad port name error after you choose OK, make sure that you are using standard DOS file naming conventions.

5 In the CrownNet Print Utility, select the Windows port you just installed.

If the printer Status shows *No Response*, you can either wait up to 15 seconds for the status to change or, after about 15 seconds, choose the Refresh command to display a message such as *OK*, *Busy*, *Offline*, *Occupied*, or *Out of Paper*. If the *No Response* message persists, or if an *Internal Error* message displays, either refer to the CrownNet Print Utility on-line help for advice on further action or close the utility and restart it.

6 In the Port menu, choose Connect to bring up the Printers dialog box.

7 Select a printer from the list of Printers, and then from the File menu choose Properties.

» **Note:** *If you double-click (instead of single-click) on the printer driver to display the printer driver dialog box, the Properties command is located in the Printer menu.*

If the printer is not listed, choose Add Printer to install a new printer. This opens the Add Printer Wizard.

» **Note:** *When adding a printer, keep the following two points in mind:*

- When asked how the printer is attached to your computer, choose Local Printer, **not** Network Printer.
- When asked what port you want to use with the printer, select the Windows port you installed in steps 2-4. It will be in this format: *drive:\directory\port*, where *drive* is the spooling drive, *directory* is the spooling directory, and *port* is the CrownNet Windows port name.

8 In the Properties dialog box, choose the Details tab.

9 In the Print to the Following Port drop-down list box, select the Windows port you installed in steps 2-4, and choose OK.

The Windows port name will near the top of the Ports list and will be in this format: *drive:\directory\port*, where *drive* is the spooling

Network Configuration

drive, *directory* is the spooling directory, and *port* is the CrownNet Windows port name.

10 Close the Printers dialog box.

- » **Note:** *If you opened the printer driver dialog box in step 7, you'll have to close that before closing the Printers dialog box.*

The setup is now complete, and you can immediately print through your CrownNet port. Refer to the *QMS CrownNet System Administrator's Guide* for additional information on setting up serverless and client-server (server-based) printing.

- » **Note:** *The QMS CrownNet Print Utility must be running when you print to your CrownNet port. We strongly recommend that, if you haven't already, you place the CrownNet Print Utility (CROWNPUW.EXE) into your Startup folder.*

EtherTalk NetWork Configuration

- 1 With the Macintosh running, from the Apple menu, choose Chooser.
- 2 Click the LaserWriter icon.
- 3 If your network has more than one zone, click the name of the default zone.

The printer name is automatically displayed in the default zone.

- 4 Select the name of the printer.
- 5 Click the close box.

The setup is now complete.

NetWare 3.x Network Configuration (Using CrownAdmin 3)

Add a Print Server and Assign it to a Queue

- » **Note:** *If you don't have CrownAdmin 3 installed or if you're using CrownAdmin 3 with Windows NT, UNIX, OS/2, or Macintosh, use the instructions in "NetWare 3.x Network Configuration (Using PCONSOLE)" on page 49.*

- 1 In the main CrownAdmin 3 window, select the printer you want to configure.**

Choose the Printers option button to display a list of printers.

- 2 Choose the NetWare NDS button.**

- 3 In the list of options that appears, choose (NDS) PServer Name-Bind, type the print server name in uppercase only, and choose OK.**

The print server name you enter must match the print server name defined on a file server.

CrownAdmin 3 will ask you for the password.

- 4 If you're already logged in to a file server with supervisor privileges, skip to step 5.**

If not, you need to log in to a file server with supervisor privileges:

- From the Server menu, choose Logins.
- In the Login/Logout dialog box, select a NetWare file server from the Available File Servers list.
- Choose the Login button.

- » **Note:** *You can't simply attach to a file server; you must log in.*

- In the Server Authentication dialog box that appears, type your name in the Username text box, type your file server password in the Password text box, and choose the OK button.

- e You're returned to the Login/Logout dialog box, and the file server is added to the File Servers Logged Into list.
- f Choose the Done button.

- 5 From the Server menu, choose Configure PServers.**
- 6 Type the name of the print server (from step 3) in uppercase only, in the Print Server name text box and choose the Find Print Servers button.**

A list of File Servers on which that print server is defined appears in the Defined Print Servers list. Skip to step 8.

If you don't remember the name of the Print Server, choose the Find Name button. In the Find Print Server dialog box a list of File Servers you're logged in appears in the Available File Servers list. Select one, choose the Find Print Servers button, select a print server from the Choose a Print Server list, and choose OK.

You're returned to the Configure Print Server dialog box.

- 7 If the print server name defined in step 3 doesn't appear in the Defined Print Servers list, select a File Server from the File Servers list and choose the Add>> button to create a print server on that file server, then select the new print server.**
- 8 Use the Operators button and/or the Users button to assign operators and/or users to the Print Server.**
- 9 Choose Done to return to the Configure PServer mode dialog box.**
- 10 Choose the Queues button in the Configure Print Server dialog box to create and assign queues to be serviced by the printer.**
- 11 Select a queue from the list of "Unserviced Queues", or use the Create button to create a new queue.**
- 12 After selecting the queue in the list of "Unserviced Queues", use the Add button to move the queue selected to the "Serviced Queues" list.**

- 13 Select the queue from the “Serviced Queues” list, and choose the Operator’s or Users button to assign operators and users to the queue.
 - 14 Choose Done to return to the Configure PServer dialog box.
 - 15 Choose Done in the Configure PServer Mode dialog box to return to the main CrownAdmin 3 window.
 - 16 Choose the CrownNet Soft Reset button at the top of the main CrownAdmin 3 window to reset the printer’s CrownNet interface.
- » **Note:** *A password may be needed to execute a soft reset. The default password is ADMIN. This may be needed to execute a soft reset.*

The setup is now complete.

NetWare 3.x Network Configuration (Using PCONSOLE)

- » **Note:** *This procedure can also be performed through CrownAdmin 3 on supported platforms, if you have it installed. See “NetWare 3.x Network Configuration (Using CrownAdmin 3)” on page 46.*

Add a Print Server and Assign it to a Queue

- 1 From any network workstation, log in with supervisor privileges to the file server you want to service the printer.
- 2 Start the NetWare 3.x PCONSOLE utility.
- 3 At the Available Options menu, select Print Server Information and press Enter.
- 4 To create a new print server, press the Ins[ert] key on the workstation keyboard.
- 5 Type the name (up to 47 characters) of the new print server, and press Enter.
- 6 Press Esc to return to the Available Options menu.

- 7 From the Available Options menu, select Print Queue Information and press Enter.**
- 8 If you want to select an existing print queue to be serviced by the print server, skip to step 10.**

If you want to create a new print queue, press the Ins key.
- 9 Type the name of the new print queue and press Enter.**
- 10 Select the queue you want the print server to service, and press Enter.**
- 11 In the Print Queue Information menu select Queue Servers and press Enter.**
- 12 Press the Ins key to display the Queue Server Candidates menu.**
- 13 Select the appropriate print server name and press Enter.**
- 14 Press Esc three times to return to the Available Options menu.**
- 15 Select the option Print Server Information and press Enter.**
- 16 Highlight your print server and press Enter.**
- 17 Select the option Print Server Configuration and press Enter.**
- 18 Select Printer Configuration and press Enter.**
- 19 Highlight one of the “Not Installed” printers and press Enter.**
- 20 Enter the name of the printer, if desired.**
- 21 Select Type and choose Remote/Other Unknown.**
- 22 Press Esc.**
- 23 Choose Yes to save changes.**
- 24 Press Esc once to return to the Print Server Configuration menu.**
- 25 Select Queues Serviced By Printer and press Enter.**
- 26 Select Defined Printer and press Enter.**

- 27 Press Ins[ert] to add queue to be serviced by the printer.
- 28 Select Queue and press Enter.
- 29 Select Priority and press Enter.
- 30 Press Esc six times to display the Exit PCONSOLE menu.
- 31 Select Yes to exit from PCONSOLE.

The setup is now complete.

NetWare 4.x Network Configuration (Using PCONSOLE)

- 1 From any network workstation, log in with admin privileges to the file server you want to service the printer.
- 2 Start the NetWare PCONSOLE utility. If needed, use the option Change Context to position yourself in the proper place within the NDS tree to install your print server.
- 3 At the Available Options menu, select Print Servers and press Enter.
- 4 To create a new print server, press the Ins[ert] key on the workstation keyboard.
- 5 Type the name of the new print server, and press Enter.
- 6 Choose Print Server and press Enter.
- 7 Select Printers from the Print Server Information menu.
- 8 Press the Ins[ert] key at the Serviced Printers screen.
- 9 Press the Ins[ert] key at the Object, Class screen.
- 10 Type the new printer name and press Enter.
- 11 Select Printer on the Object, Class screen and press Enter to return to the Serviced Printers screen.
- 12 Select Printer and press Enter.
- 13 At the Printer NAME Configuration screen, enter the printer number (0-254).

- 14 Enter the Printer Type as "Other/Unknown."
- 15 At the Print Queues Assigned screen press Enter.
- 16 At the Print Queue screen press Ins[ert].
- 17 At the Object, Class screen press Ins[ert].
- 18 Enter the queue name and press Enter.
- 19 At the Print Queue's Volume prompt, Press Ins[ert] to highlight the volume where the queue will be stored.
- 20 Press Enter to return to Object, Class screen.
- 21 Highlight Queue and press Enter
- 22 Press Esc twice and answer Yes to the "Save changes" prompt.
- 23 You should be back at the Serviced Printers screen.
- 24 Press Esc 4 times to exit PCONSOLE.

The setup is now complete.

NetWare 4.x Network Configuration (Using NWAdmin)

- 1 If you are not already within Windows, start Windows.
 - 2 Double click the NWAdmin icon.
 - 3 If the tree is not displayed, select Tools - Browse to display the directory tree.
 - 4 Select the container that will hold the print server, printer, and queue.
- » **Note:** *Although it's not required that all three objects reside in the same container, it is recommended by Novell.*
- 5 Select Object - Create.
- » **Note:** *While the order of creation is not mandatory, we recommend that the objects be created in this order.*

On all creation opening screens, you have the opportunity to change context if needed.

- 6 Select Print Queue and click OK.**
- 7 Type the name of the print queue.**
- 8 Click the icon button next to the Print Queue Volume to select the volume to store the queue. The context can be changed if needed.**
- 9 Click OK.**
- 10 Choose Create.**
- 11 Select Object - Create.**
- 12 Select Printer and click OK.**
- 13 Type the name of the printer.**
- 14 Select Define Additional Properties.**
- 15 Choose Create.**
- 16 Click the Assignment tab.**
- 17 Click the Add button.**
- 18 Select the queue added in above to be serviced by this printer and click OK.**
- 19 Click the Configuration tab.**
- 20 Select "Other/Unknown" for the printer type.**
- 21 Click OK.**
- 22 Select Object - Create.**
- 23 Select Print Server and click OK.**
- 24 Type the name of the print server. (This should match the name entered on the interface card).**
 - a Choose Define Additional Properties.**
 - b Choose Create.**
- 25 Click the Assignments tab.**

- 26 Click the Add button.
 - 27 Select the printer you named in the previous steps. Change the context if needed.
 - 28 Select OK.
 - 29 Select OK.
- » **Note:** *Additional properties, such as users and operators, can also be assigned during initial installation or at a later time.*
- 30 If the CrownNet Interface Card has already been configured, the print server should now log into the file server.

The setup is now complete.

OS/2 LAN Manager/LAN Server Network Configuration

- 1 With the CrownNet Manager for OS/2 installed and running, add the printer by clicking the Install entry on the action bar.

The printer appears in the list displayed on the screen (for example, QMS_080086000001).

- 2 Use the appropriate section below to create a print queue and assign it to the printer.

OS/2 Version 1.x Network Configuration

If you're using OS/2 version 2.x, skip to "OS/2 Version 2.x and OS/2 Warp NetWork Configuration" on page 56.

- » **Note:** *This is the standard method of adding a printer in OS/2 version 1.x. The procedure is repeated here for your convenience.*

Add a Printer

- 1 With the Print Manager open, from the Setup menu choose Printers...
- 2 In the Printers dialog box, choose Add...

- » **Note:** *If you're working with an existing printer, select the printer name and choose Change.*

The Add Printer (or Change Printer) dialog box appears.

- 3 In the Name field, type the printer name (only if you are adding a printer).**

The printer name is local to the workstation and is used to associate queues with physical printers. It can be the same as the name used at the printer.

- 4 In the Device box, select the printer's pipe name.**

Pipe names have the form \PIPE\QMS_*name* where *name* is the printer's default hardware address or the printer name set in the "Interface Configuration" on page 32.

- 5 Select IBMNULL as the printer driver.**

- 6 If appropriate, fill in the Description and Printer Timeout Transmission Retry boxes.**

- 7 Choose Add... to return to the Printers dialog box.**

- » **Note:** *If you're working with an existing printer, choose Change.*

- 8 In the Printers dialog box, choose OK to return to the Print Manager.**

Add a Print Queue

- 1 With the Print Manager still open, from the Setup menu choose Queues...**

- 2 In the Queues dialog box, choose Add...**

- » **Note:** *If you're working with an existing queue, select the queue to be changed and then choose Change.*

The Add Queue (or Change Queue) dialog box appears.

- 3 In the Name field type a name for the queue (only if adding a queue).**

This is the name available to workstations on the network. It can be the same as the name set for the printer.

- 4 If appropriate, fill in the Description, Queue Driver, Priority, and Scheduling boxes.
- » **Note:** *Separator pages are not currently supported.*
- 5 **Select the printer name you identified in the previous section from the list of Printers.**

This name will be displayed in the box titled Select the Printer to be Used by This Queue.
- 6 **Choose Add... to return to the Queue dialog box.**
- » **Note:** *If you're working with an existing queue, choose Change.*
- 7 **In the Queue dialog box choose OK to return to the Print Manager window.**
- 8 **Skip to "Print Queue Sharing" on page 57.**

OS/2 Version 2.x and OS/2 Warp NetWork Configuration

- » **Note:** *This is the standard method of installing a printer in OS/2 version 2.x and OS/2 Warp.*
- 1 **With OS/2 running, double-click the Templates folder.**
- 2 **Hold down the right mouse button and drag the Network Printer icon out to the Workplace Shell (or into a folder).**
- 3 **Type a name in the Printer Name field.**
- 4 **Select a printer driver from the Default Printer Driver list.**
- 5 **Select a pipe name from the Output Port list.**

Pipe names have the form \PIPE\QMS_*name* where *name* is the printer's default hardware address or the printer name set in "Interface Configuration" on page 32. If a QMS pipe is not available, make sure you have installed the CrownAdmin 2 for OS/2.
- 6 **Choose Create to confirm the new printer definition.**
- 7 **Go to the following section, "Print Queue Sharing."**

Print Queue Sharing

To access a print queue from other workstations or servers on the network, the queue must be a shared resource. The following procedure is only one of the ways a queue can be shared. For other methods, see your OS/2 LAN Manager/LAN Server documentation.

» **Note:** *You need administrator privileges to perform this operation.*

1 If necessary, with OS/2 running, open an OS/2 window.

2 Type

```
net share queue_name /print┐
```

where *queue_name* is the queue or printer object you created above.

» **Note:** *While queue and printer names may differ in OS/2 version 1.x, they are the same in version 2.x.*

TCP/IP NetWork Configuration

1 Log on the UNIX system as root.

2 Edit the system host table by adding the following line to the /etc/hosts file:

```
internetaddress hostname
```

where *internetaddress* is the Internet address of the printer (Administration/Communications/xxxxxxx NIC/CrownNet/TCP/IP/Internet Address menu (where xxxxxxxx is either Resident or Optional)) and *hostname* is the name of the printer.

3 If necessary, set the hardware address.

▲ **Caution:** *We strongly recommend that you do not change the hardware address.*

- If you're working on a system other than a UNIX system, set the hardware address through the printer control panel.

Network Configuration

- If you're working on a UNIX system, send the hardware address to the print server by typing

```
arp -s hostname hardwareaddress temp↵  
ping hostname↵
```


where *hostname* is the name of the host and *hardwareaddress* is the new hardware address of the printer (in the form *##.##.##.##* as found on the printer start-up page).

» **Note:** *You can also send the hardware address of a UNIX system through the BOOTP and RARP utilities.*

Printer Web Page

Built into your QMS printer is an accessible HTTP/HTML web page that can be viewed by your web-browser software over your intranet. The printer web page gives you status and configuration information about your printer and allows you to access the QMS web page for more help and printer information.

This example shows a printer web page for a QMS 3260 Print System. Elements of the web page will change depending on the type of printer you have.

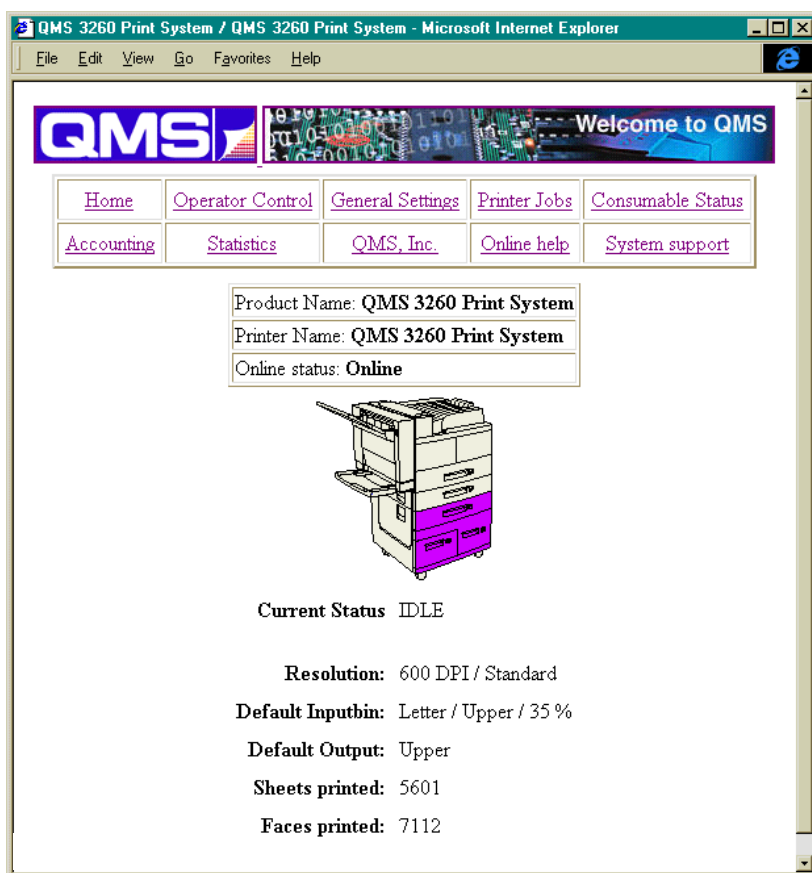


Accessing the Web Page

For your browser to access the printer web page on your intranet, you must add the printer name to the no proxy list for your browser.


For Netscape

- 1 **Start your web browser.**
- 2 **Access the Options menu and choose Network Preferences.**
- 3 **Select the Proxies tab on the dialog box.**

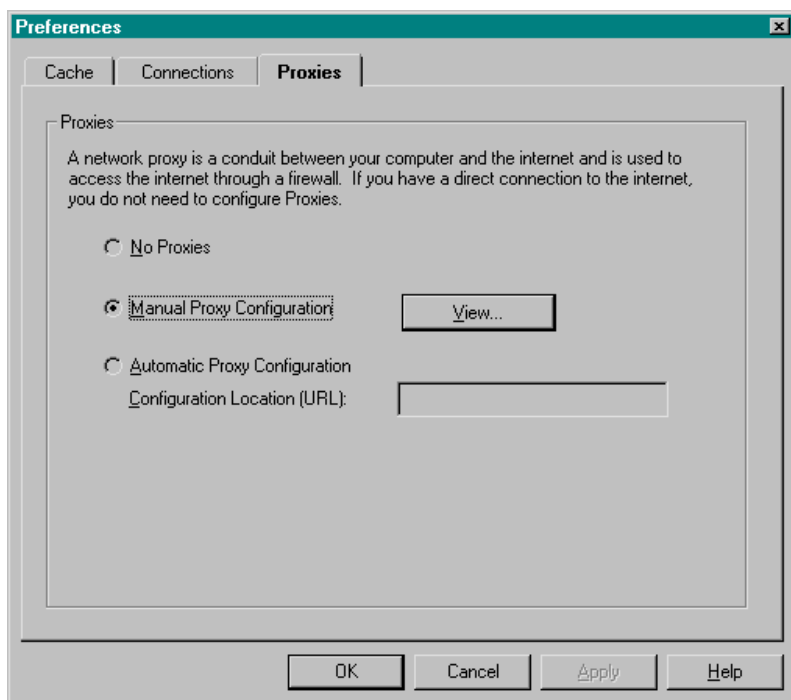


- 4 **Select the Manual Proxy Configuration radio button and press the View.. button.**

- 5 In the No Proxy For: text box, type a comma after the last entry and then type the host name used for the printer associated with the IP address or the IP address.

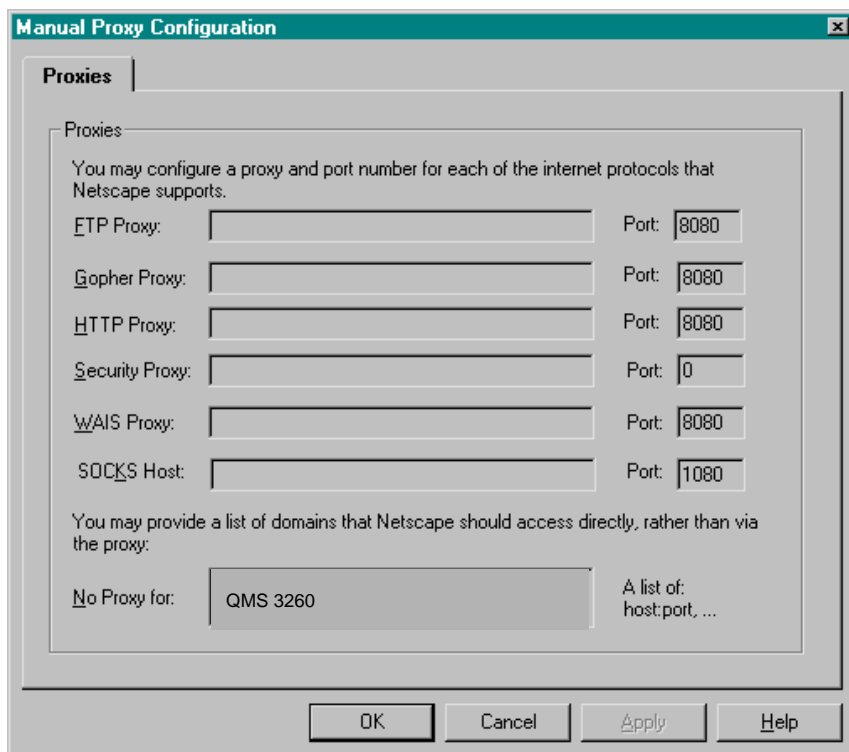


- 6 Click OK.
- 7 Now you should be able to enter the printer name in the Go to: URL address box

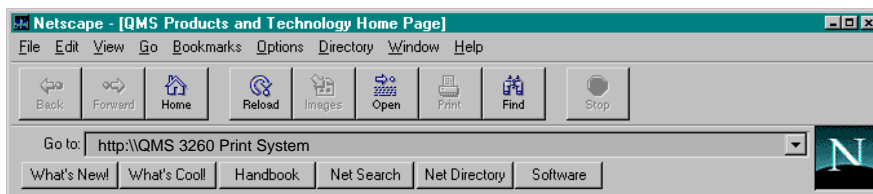


For Internet Explorer

- 1 Start your web browser.**
- 2 Access the View menu and choose Options.**
- 3 Select the Connection tab on the dialog box.**

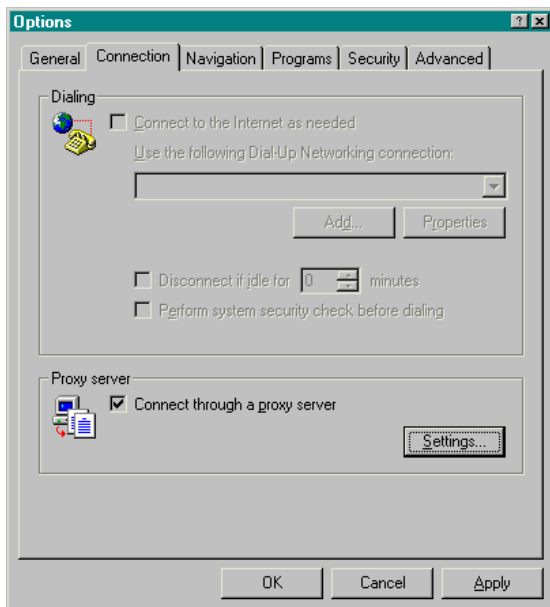


- 4 Click the Settings button to display the Proxy Settings dialog box.**

- 5 In the Exceptions text box, type a semicolon after the last entry and then type the host name used for the printer or the IP address.

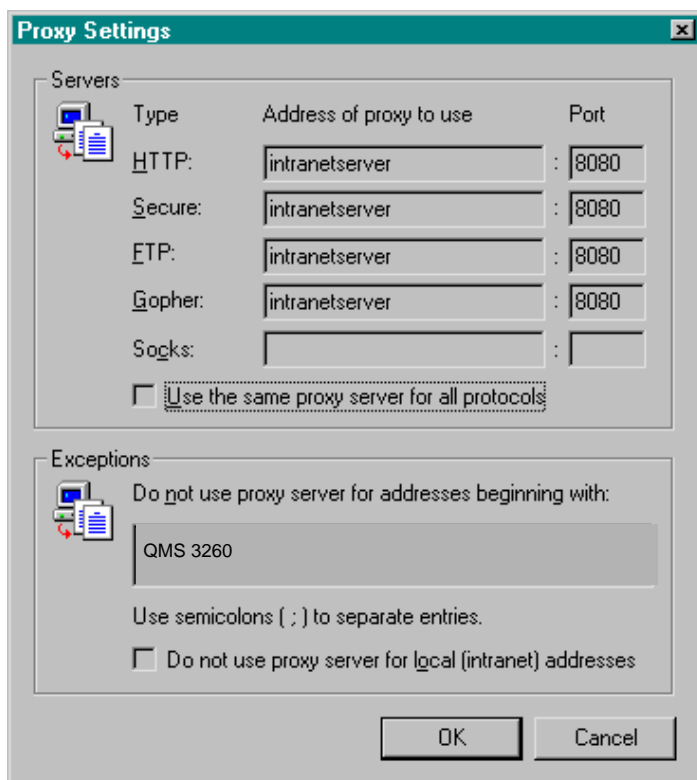

- 6 Click OK.
- 7 Now you should be able to enter the printer name in the URL address box

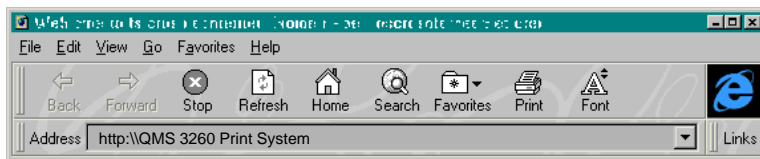

Printer Home Page

The Printer Home Page is the starting point for all access to the printer web pages. On this page you can find hotlinks to all of the supporting web pages for your printer.

The home page of the printer web page contains

- A printer graphic that shows active status of input and output bins
- The product name and the configured printer name
- Current status, resolution, default input and output bins, number of sheets and faces printed
- Hotlinks to other pages in the printer

You can return to this page from any other printer web page by choosing the Home hotlink.

Operator Control Page

The Operator Control hotlink on the home page will jump to the Operator Control page. This page contains a form which will allow you to configure settings in your printer.

The Operator Control page contains

- The product name and the configured printer name
 - Number of copies, duplex, collation, orientation, inputbin, outputbin, and other configuration options based on your printer's features
- » **Note:** *For complete information on printer configuration settings, refer to your printer documentation.*

General Settings Page

The General Settings Page contains links to different groups of printer configuration settings. This information can be viewed to show you the status of the printer, but it cannot be changed. To change

these settings you must access the printer's configuration through the control panel of the printer, a remote or local console, or CrownAdmin 3.

The General Settings page contains

- Printer settings
- Communications settings and input buffer sizes
- Paper sources
- Options available with the printer (such as duplexer or emulation)
- Current memory configuration
- Hard disk status
- Timeouts

» **Note:** *For complete information on printer configuration settings, refer to your printer documentation.*

Printer Jobs Page

The Printer Jobs hotlink on the home page jumps to the Printer Jobs page. This page contains information about the current jobs the printer is processing and information on the previous five jobs printed.

The Printer Jobs Page contains

- Job number, status, priority, owner name, job title, interface used, number of sheets, number of pages, of the current jobs processing
- Job number, status, priority, owner name, job title, interface used, number of sheets, number of pages, of the previous five jobs processed

» **Note:** *For complete information on printer configuration settings, refer to your printer documentation.*

Consumable Status Page

The Consumable Status hotlink on the home page jumps to the Consumable Status page. This page contains information about the

usage and level of consumables that the printer is using (such as paper and toner.)

- » **Note:** *The scales are an estimate, reported as a percentage, and do not indicate the exact amount of consumables used.*

Accounting Page

The Accounting hotlink on the home page jumps to the Accounting page. This page shows you the status of the accounting function and the amount of disk space allocated to accounting.

- » **Note:** *For complete information on accounting, refer to your printer documentation.*

Statistics Page

The Statistics hotlink on the home page allows you to check the amount of usage for printer consumables, such as the number of sheets, faces, and planes printed as well as the average coverage of toner.

- » **Note:** *The number of sheets/faces printed statistics differ from the number of sheets printed statistics on the printer's start-up and status pages, which refer to the total number of sheets/faces of media printed during the life of the printer.*

QMS, Inc. Page

The QMS, Inc. hotlink on the home page jumps to the QMS web site (QMS Corporate URL selection) configured on the System Support page. From the QMS web site you can access information about other QMS printers, contact information, a FAQ database, printer manuals, and online performance support.

Online Help Page

The Online Help hotlink on the home page jumps to any help information that has been configured on the System Support Page (printer help URL selection). You can configure this to jump to your own help web site set up on your local intranet. The default setting will jump to

the QMS online support information for your QMS print system. From this location you can access QMS technical support, a FAQ list for your printer, and a quick-help system.

System Support Page

The System Support hotlink on the home page jumps to the System Support Page. This page can be used to set up internal support for the printer as well as links to the QMS web site.

The System Support Page contains


- Refresh rate selection option. Allows you to select the refresh rates Off, 15 seconds, 30 seconds, 60 seconds, and 5 minutes
 - Product name and printer name
 - A text box for entering the name of a local expert
 - A text box for entering a local or QMS contact number
 - The printer help URL. The default address takes you to the help located on the QMS website.
 - The QMS corporate URL (web address)
 - A text box for entering a supplies and accessories contact number
- » **Note:** *For complete information on printer configuration settings, refer to your printer documentation.*

CrownNet Menus

Use the following menu flowcharts to help find your way around the CrownNet configuration menu structure.

- » **Note:** *The structure of these flowcharts may vary slightly with older versions of CrownNet. See your printer documentation for higher-level menus.*


Overall View of the CrownNet Menu

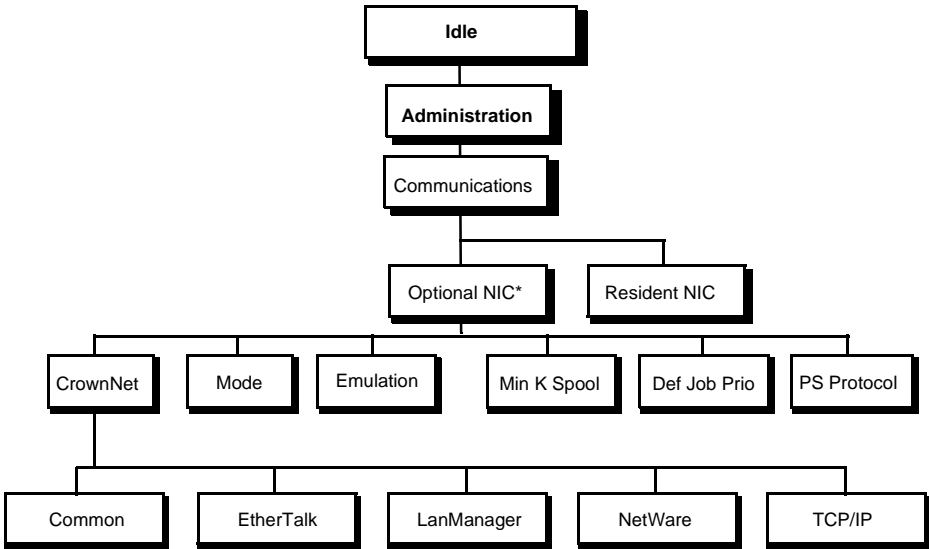

**Some printers may not have an Optional NIC interface menu.*


Common Menu

This menu gives you choices common to all of the CrownNet communications interfaces.

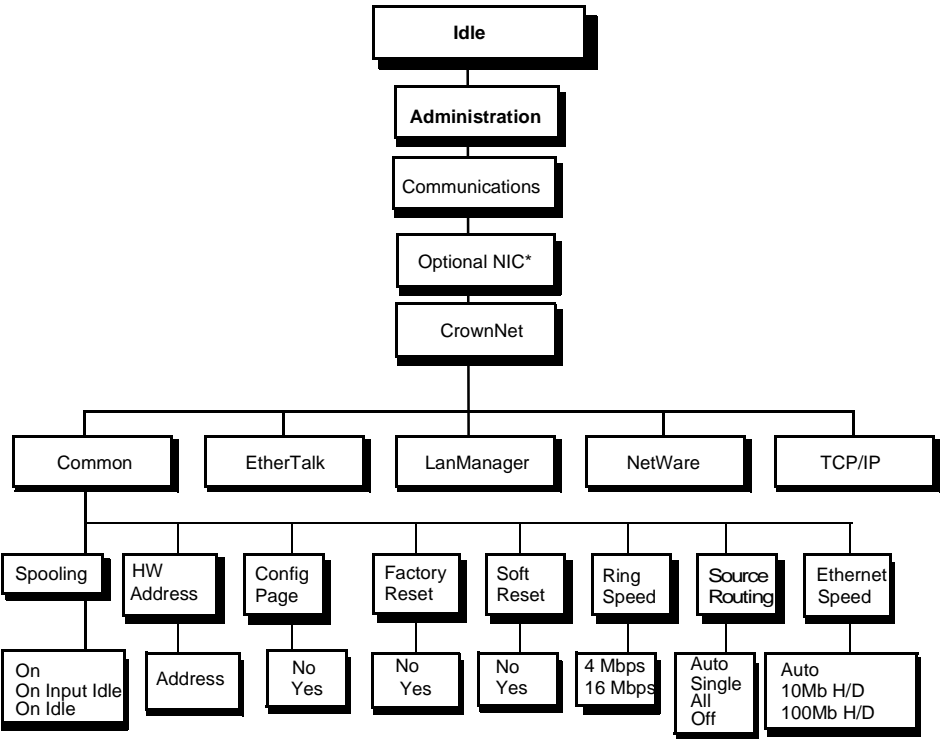


**Some printers may not have an Optional NIC interface menu.*

EtherTalk Menu

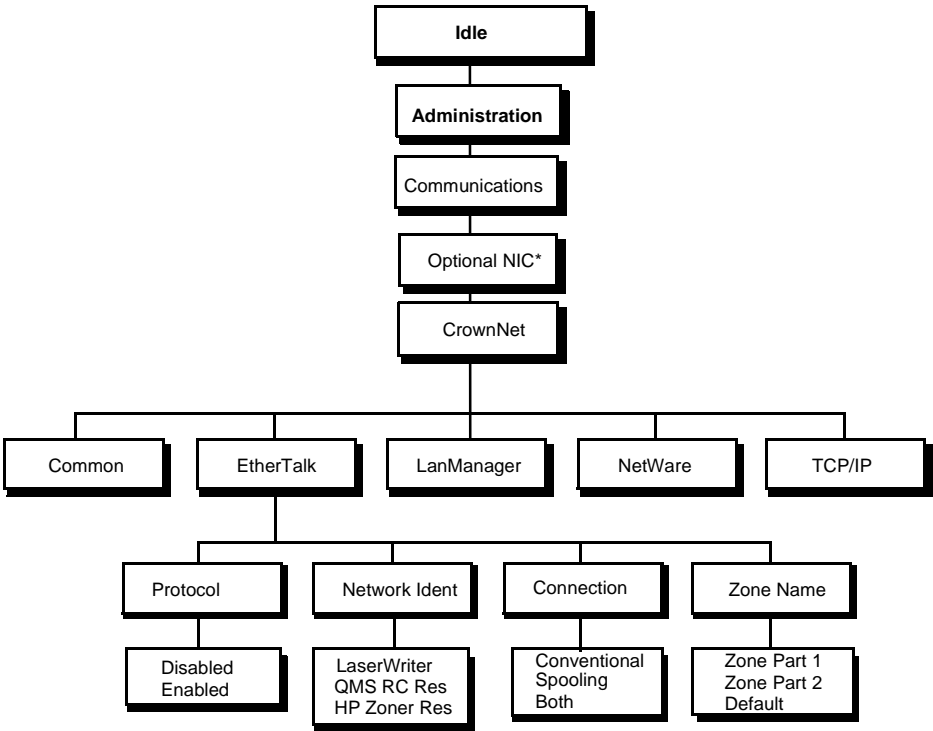


**Some printers may have an Optional NIC interface menu.*

Lan Manager Menu

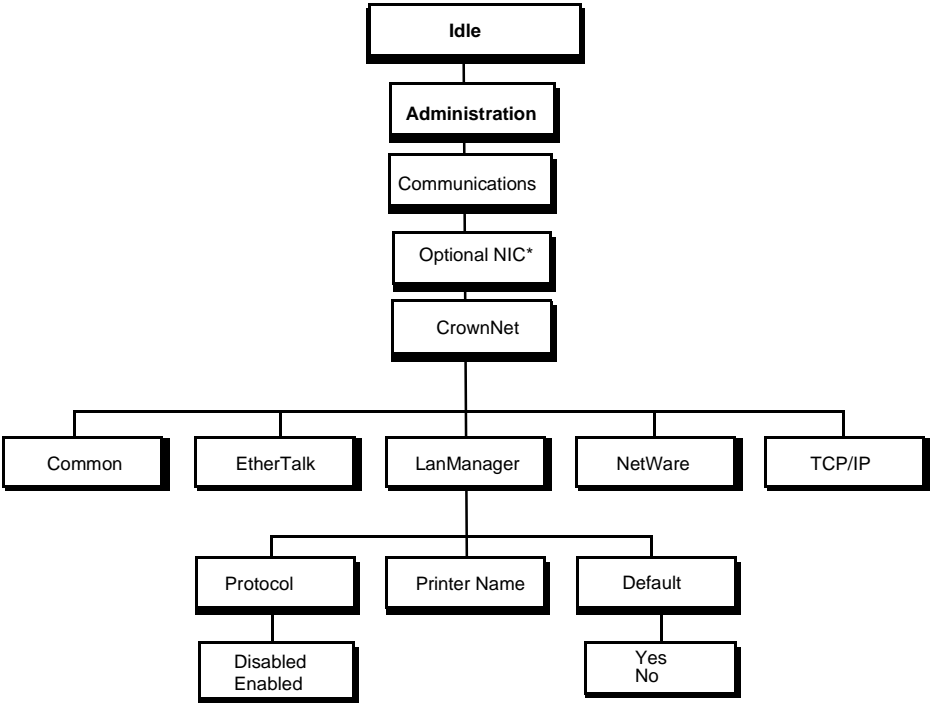


**Some printers may have an Optional NIC interface menu.*

NetWare Menu

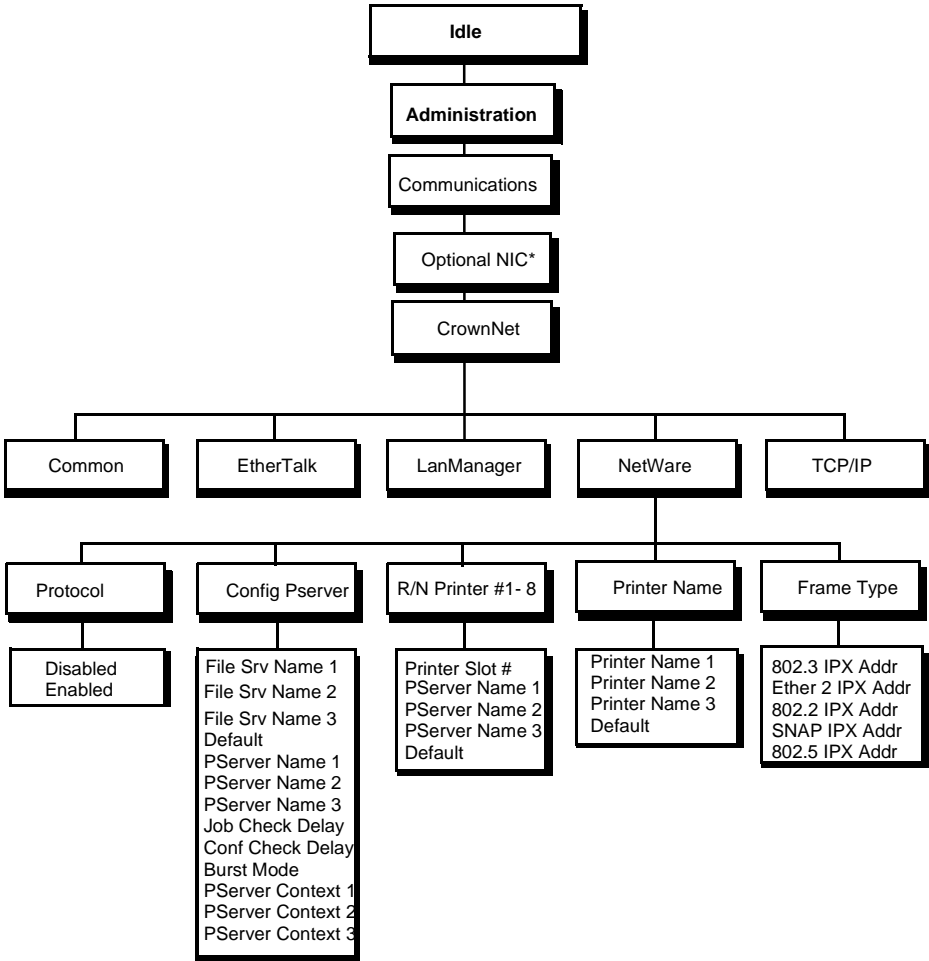

**Some printers may have an Optional NIC interface menu.*

TCP/IP Menu

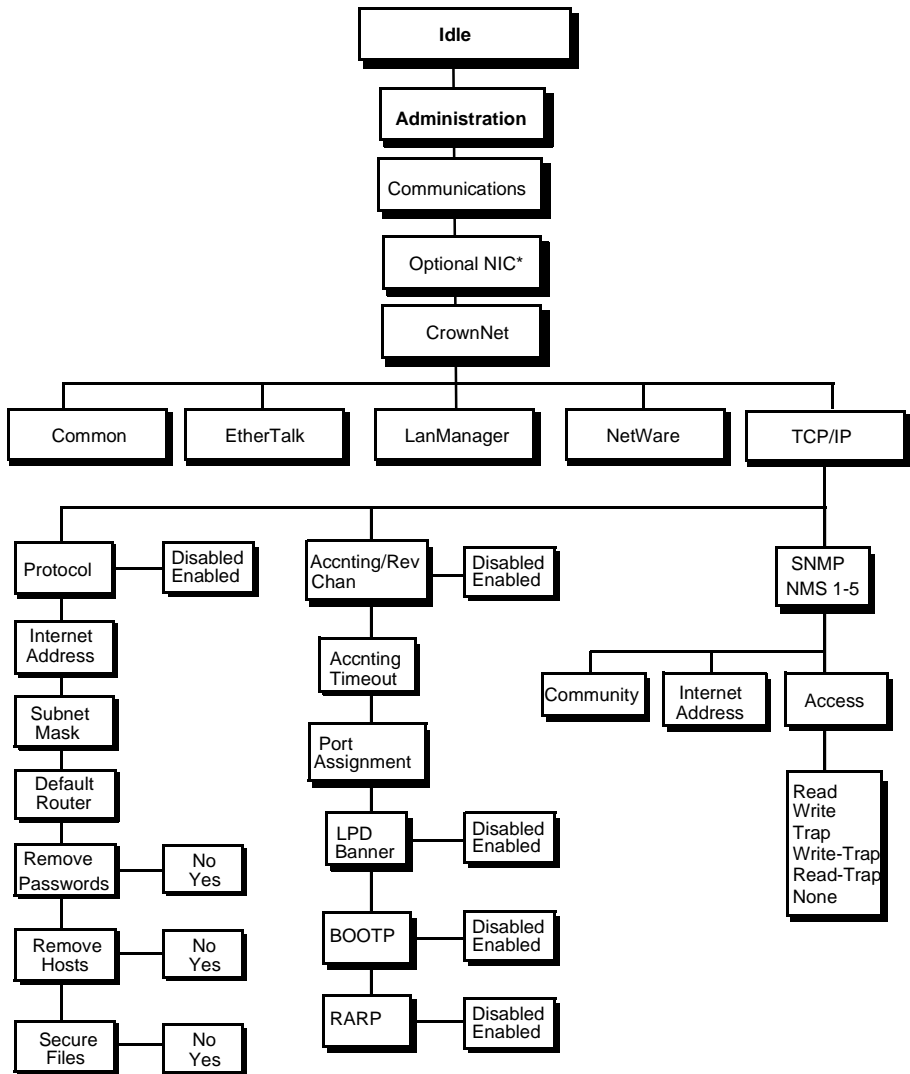

» **Note:** Some printers may have an Optional NIC interface menu.

Where To Go From Here

In addition to this setup guide, the following documentation contains information you may need:

- CrownAdmin 3 online help—Contains detailed information on using CrownAdmin 3. Choose Contents from the Help menu in the main CrownAdmin 3 window (or choose any Help button) to access the on-line user's guide. CrownAdmin 3 online help is also provided on the documentation CD-ROM in hypertext PDF files.
- CrownNet Print Utility online help—Contains detailed information on using CrownNet Print Utility.
- QMS Printer Web Page support information—Contains FAQ database and full hyperlinked help pages in PDF format with information on CrownNet and the printer.
- *QMS CrownNet System Administrator's Guide*—Provides detailed configuration and utility information.
- *QMS Crown Remote Console User's Guide*—Explains how to use Remote Console to control printing from a workstation anywhere on the network.
- *QMS Network Print Monitor Administrator's Guide* and online help—Explains how to install and use QMS Network Print Monitor for Windows NT.
- *QMS Network Print Monitor for Windows 95 Administrator's Guide* and online help—Explains how to install and use QMS Network Print Monitor for Windows 95.
- Your network documentation—Contains information on printing.

If You Have Trouble...

If you have trouble installing and setting up your QMS CrownNet interface, check the following:

- If the printer requires a network interface card, is it correctly installed in the printer?
- Is the printer connected to the network?
- Is the printer plugged in, turned on, and correctly configured?
- Do the printer start-up and status pages list the interface? Is the configuration information correct?
- Is the interface enabled?
- Is the appropriate protocol (or protocols) enabled?
- Are all printer and protocol addresses configured correctly?

Sources of Support

Several sources of help and information are available, depending on the type of help you need:

Your QMS Vendor

Your local vendor (the one from whom you bought the printer) may be best equipped to help you. Your vendor has specially trained service technicians available to answer questions, and the equipment to analyze your printer problems.

Your Application Vendor

Often, “printing” problems have more to do with the application being used than with the printer. In this case, the application manufacturer is the best source of help.

Q-FAX

Q-FAX, a QMS information retrieval service, provides application notes, technical support notes on common printing problems, and information about printer specifications, options, accessories, consumables, and prices.

In the United States and Canada, call (800) 633-7213 to reach Q-FAX. In all other countries, call (334) 633-3850. Have your fax number handy when you call (or place the call from your fax machine's handset).

You can choose to have either a directory (a list of currently available documents) or a specific document sent to you. The first time you call, request the directory (press 2 on your phone or fax keypad when prompted). Then call back to request specific documents. You can order up to three documents per call.

CompuServe

Through CompuServe, you ask general (non-technical) questions, share information with other users, and access printing information and programs. When you use CompuServe, type `go qmsprint` to go directly to the forum where QMS is located. The QMS library section contains application notes, printer drivers, utilities, technical information, and announcement files.

Internet

The QMS server provides access to technical reports, new product announcements, a trade show schedule, and other general information about QMS.

If you have access to the World Wide Web, you can view the QMS home page at <http://www.qms.com/>. The QMS ftp resource is <ftp.qms.com>.

QMS Customer Response Center (CRC)

You can contact the QMS Customer Response Center (CRC) in three different ways:

- **Telephone**—You can call the CRC at (334) 633-4500 (US) Monday–Friday, 7:00 am–6:00 pm, Central Time.
- » **Note:** *If you call for assistance, have the following information ready so our technicians can help you more quickly:*
 - ☑ Your phone number, fax number, and shipping address
 - ☑ A description of the problem
 - ☑ The printer model
 - ☑ The type of host computer you're using
 - ☑ The type and version of operating system you're using
 - ☑ The interface you're using, and, if serial, the protocol (for example, XON/XOFF)
 - ☑ The application and version you're using
 - ☑ The emulation you're using
 - ☑ Your printer firmware version (listed on the status/start-up pages)
- **Fax**—You can fax questions to the CRC at (334) 633-3716 (US). Provide the same information as listed above, and indicate whether you would like a faxed or a phoned reply.
- **Internet**—If you have access to the World Wide Web, you can access the CRC through the QMS home page at <http://www.qms.com/>

QMS World-wide Offices

QMS United States and Latin America

General Contact

1 (334) 633-4300

Fax 1 (334) 633-4866

Email info@qms.com

Internet <http://www.qms.com>

Information on QMS products, supplies, and accessories, and on the
authorized QMS remarketer or service provider nearest you

1 (800) 523-2696

Customer Response Center (CRC)

Technical Assistance

1 (334) 633-4500

7:00 am–6:00 pm Central Time

Fax 1 (334) 633-3716

Internet <http://www.qms.com>

Latin America Fax

1 (334) 639-3347

National Service

Service Information, Installation, and Maintenance Pricing

1 (800) 762-8894

On-Site Service and Depot Repair Information

1 (800) 858-1597

7:00 am–7:00 pm Central Time

Spare Parts Ordering and Information

1 (334) 633-4300 x2530

8:00 am–5:00 pm Central Time

QMS Canada

General Contact

1 (514) 340-0646

Fax 1 (514) 340-0401

Supplies and Accessories

1 (800) 268-0343 x223

National Service

On-Site Service and Depot Repair Information

1 (800) 268-4969

8:30 am–7:00 pm Eastern Time

Spare Parts Ordering and Information

1 (905) 206-9234 x238

8:30 am–5:00 pm Eastern Time

QMS in Japan

General Contact

(+81)-3 3779-9600

Fax (+81)-3 3779-9650

Internet <http://www.qmsj.co.jp>

QMS in Latin America

General Contact

Cra 43 DD#8-42

Oficina 201

Medellin, Colombia

(+57) (4) 312 13 70

Fax (+57) (4) 268 92 97

QMS EMEA

QMS Australia

Anitech

Sydney Business & Tech. Centre

52/2 Railway Parade

2141 Lidcombe NSW

Australia

(+61) 2-9901 3235

Fax (+61) 2-9901 3273

QMS Benelux

**Belgium, Nether-
lands, and all
unlisted countries**

Planetenbaan 60 'Corner Plaza'

3606 AK Maarssen

The Netherlands

(+31) 346-551333

Fax (+31) 346-550170

Internet <http://www.qms.nl>

QMS France

Vélizy Plus

1 Bis, Rue du Petit Clamart

78142 Vélizy Cedex

France

(+33) 1-410 79 393

Fax (+33) 1-408 30 110

QMS GmbH

**Germany and
Austria**

Gustav Heinemann Ring 212

D-81739 Munich

Germany

(+49) 89 63 02 67 0

Fax (+49) 89 63 02 67 67

QMS World- wide Offices

QMS Italy	Via della Repubblica 56 43100 Parma Italy (+39) 52–1231 998 Fax (+39) 52–1232 902
QMS Nordic Sweden, Finland, Norway, and Denmark	Arenavägen 41, 6th floor 121 77 Johanneshov Sweden (+46) 8–600 01 30 Fax (+46) 8–600 01 33
QMS South Africa	Saskay House Unit 24 Sunninghill Business Park Peltier Road, Sunninghill, Johannesburg Republic of South Africa (+27) 11–807 6957 Fax (+27) 11–807 6960
QMS UK United Kingdom and Ireland	Old Bridge House, The Hythe Staines, Middlesex TW18 3JF United Kingdom (+44) 1784–442255 Fax (+44) 1784–461641



Index

A

Acrobat

Using online manuals 7

AIX

Set up 17

C

Common Menu 69

Config PServer 34

Conventions, typographic 5

CrownAdmin 3 17

Netware 4.x configuration 46

NetWare configuration 46

Set up

AIX 17

DOS 18

HP-UX 19

Macintosh 20

OS/2 21

Solaris 23

SunOS 24

Windows 26

CrownAdmin 3 on-line help 74

CrownNet 9

Alternate Media 6

What is included 6

CrownNet Menus 68

CrownNet menus

EtherTalk menu 70

Lan Manager menu 71

NetWare menu 72

TCP/IP menu 73

CrownNet Print Utility 27

LAN Server/LAN Manager Workstation
Service 28

Microsoft Windows Network support
28

Windows 3.1

Windows for Workgroups 39

Windows 95 43
Windows NT 3.5 41
WindowsNetwork Configuration
CrownNet Print Utility 39
CrownNet Print Utility for Windows
Installation 27
**Customer Response Center (CRC),
QMS 77**
Customer support, QMS 75

D

Documentation
Conventions, typographic 5
DOS
CrownAdmin 3 set up 18

E

Ethernet
Thick-wire 13
Thin-wire 12
Twisted Pair 14
EtherTalk
Interface Configuration 33
Menu 70
NetWork Configuration 46

F

File Srv Name 34

H

HP-UX
CrownAdmin 3 set up 19

I

Interface Configuration 32
EtherTalk 33
NetWare 3.xx 33
NetWare 4.x 36
Printer Control Panel 32
Remote Console 32

TCP/IP 37
Internet 76
Internet address 6
WWW address
Web address 6

L

Lan Manager Menu 71
LAN Manager/LAN Server 54
See also OS/2
**LAN Server/LAN Manager Workstation
Service 28**

M

Macintosh
CrownAdmin 3 set up 20
Microsoft Windows Network 28
Mounting the CD-ROM
AIX 17
HP-UX 19
Solaris 23
SunOS 25

N

Naming File and Print Servers 33
NetBEUI Protocol 43
NetBIOS Interface 43
NetWare 3.x Network Configuration
Using PCONSOLE 49
NetWare 3.xx
Interface Configuration 33
NetWare 4.x
Interface Configuration 36
NetWare 4.x configuration
Network Configuration
NetWare 4.x
CrownAdmin 3 46
NetWare 4.x Network Configuration
CrownAdmin 3 46
Using CrownAdmin 3
CrownAdmin 3

- Netware 4.x configuration 46
- Using NWAdmin 52
- Using PCONSOLE 51

NetWare Menu 72

Network Configuration

- EtherTalk 46
- NetWare 4.x
 - NWAdmin 52
 - PCONSOLE 51
- OS/2 54
- TCP/IP 57

Network Connection 12

- Ethernet 12
- Ethernet Thick-wire 13
- Ethernet Thin-wire 12
- Ethernet Twisted-Pair 14
- Token-Ring 15
- Token-Ring 16 Mb 15
- Token-Ring 4 Mb 15

NWAdmin 52

O

Online manuals

- Tips 7

OS/2

- CrownAdmin 3 set up 21
- See also LAN Manager/LAN Server

OS/2 LAN Manager/LAN Server

- Interface Configuration 33

OS/2 LAN Manager/LAN Server

Network Configuration 54

- Print Queue Sharing 57
- Version 1.x 54
- Warp 56

OS/2 Print Server 21

OS/2 Workstation 22

P

PCONSOLE 51

- Network Configuration
 - NetWare 3.x
 - PCONSOLE 49

Print Monitor

- Windows 95 74
- Windows NT 74

Printer Control Panel 32

Printer Name

- Windows 33

Printer Web Page 59

- Accessing 60
- Accounting Page 66
- Consumable Status Page 66
- General Settings Page 64
- Internet Explorer setup 62
- Netscape setup 60
- Online Help Page 67
- Operator Control Page 64
- Printer Home Page 64
- Printer Jobs Page 65
- QMS, Inc. Page 67
- System Support Page 66

Product Registration 8

PServer Name 34

Q

Q-FAX 76

QMS

- Customer Response Center (CRC) 77
- World-wide offices 78

QMS Software Utilities CD-ROM

- CrownNet Print Utility for Windows 28

R

Remote Console 32

Remote Printers 35

RN Printer 35

S

Service

- United States 77

Set up

- AIX 17
- DOS 18

- HP-UX 19
- Macintosh 20
- OS/2 21
- Set up 9
- Software installation 17
- Solaris 23
- SunOS 24
- Windows 26

Setup

- Internet Explorer 62
- Netscape 60

Soft Reset

- Common Menu
 - CrownNet menus
 - Common menu 69
- NetWare 3.x 36
- NetWare 4.x 37

Solaris

- CrownAdmin 3 set up 23

Source Routing Type 16

SunOS

- CrownAdmin 3 set up 24

Support, QMS

- Customer 75
- Internet 76
- Technical 77
- World-wide 78

T

TCP/IP

- Interface Configuration 37

TCP/IP Menu 73

TCP/IP NetWork Configuration 57

Technical support, QMS 77

Token-Ring 15

- 16 Mb 15
- 4 Mb 15
- Source Routing Type 16

Troubleshooting 75

Typographic conventions 5

U

UNIX Host Software

- Installation 30

Using Soft Reset

- Common Menu 69
- NetWare 3.x 36
- NetWare 4.x 37

W

Web address 6

Windows

- CrownAdmin 3 set up 26
- Port setups 41
- System Requirements 26

Windows 95

- Network configuration 43

Windows 95 Print Monitor 74

Windows Network

- See Microsoft Windows Network

Windows Network Interface

- Configuration 33

Windows NT Print Monitor 74

Windows Print Utility 27

- Network configuration 39, 41, 43

WWW address 6

